



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

NEW INSTALLER TRAINING

EOS|HD Headset System

ZOOM Timer System

HME CLOUD

HME Leaderboard

WELCOME!

1. This training is a full day
2. There will be breaks and a lunch break
3. Save phone calls or other distractions for breaks
4. Take notes, participate and ask questions

There will be a test at the end of the training used in the consideration of your HME certification!

AGENDA

Drive Thru Audio



Drive Thru Optimization System (DTOS)



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

HOW IT WORKS



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS


COMPONENTS



WHERE THEY GO

There are 3 areas that are involved in a headset system installation:

1. Outside the Store
 - Microphone, speaker and loop
2. In-Between
 - Cable pull
3. Inside the Store
 - Base, charger, VDB, batteries and headsets

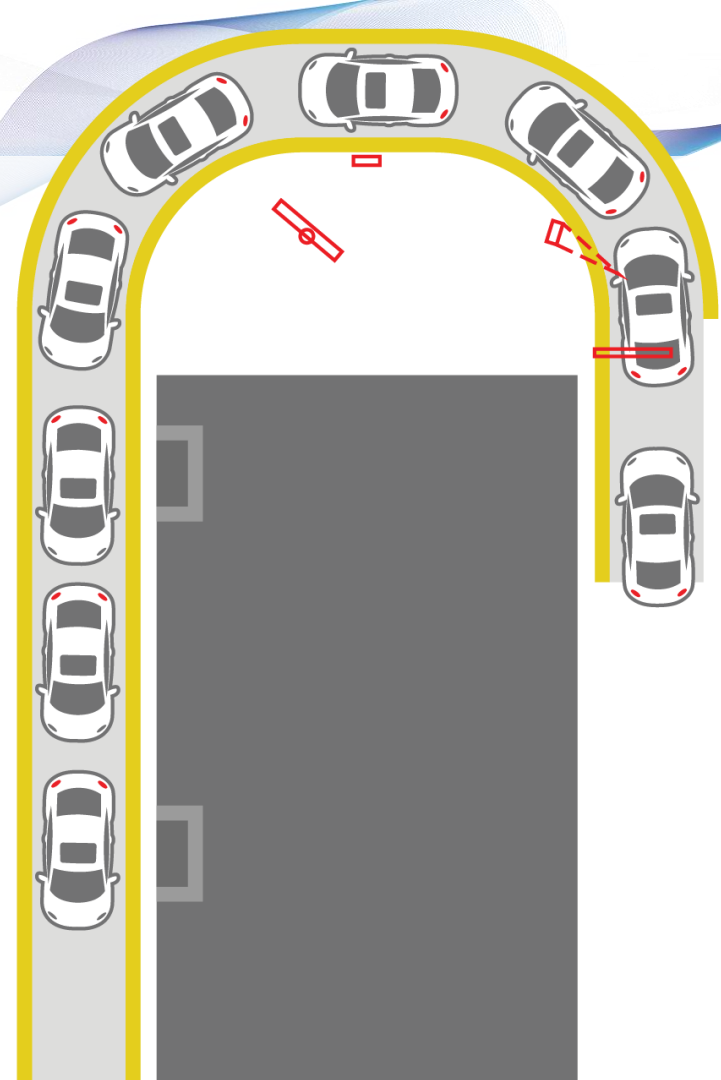


OUTSIDE THE STORE

1. Microphone
2. Speaker
3. Loop





MOUNTING

1. Mic should be on top (eye level with customer)
2. Speaker should be on the bottom
3. Minimum of 61cm (24") of separation between the mic and speaker

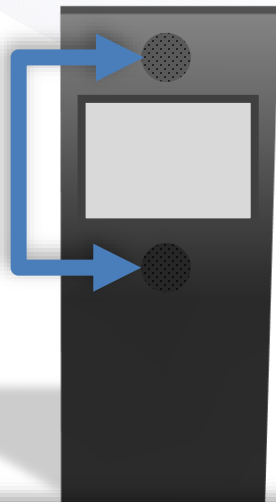



MICROPHONE

1. No physical or mechanical mounting
2. Completely float in acoustic foam
3. Push all the way forward
4. Use windscreen
5. Fill empty space with acoustic foam

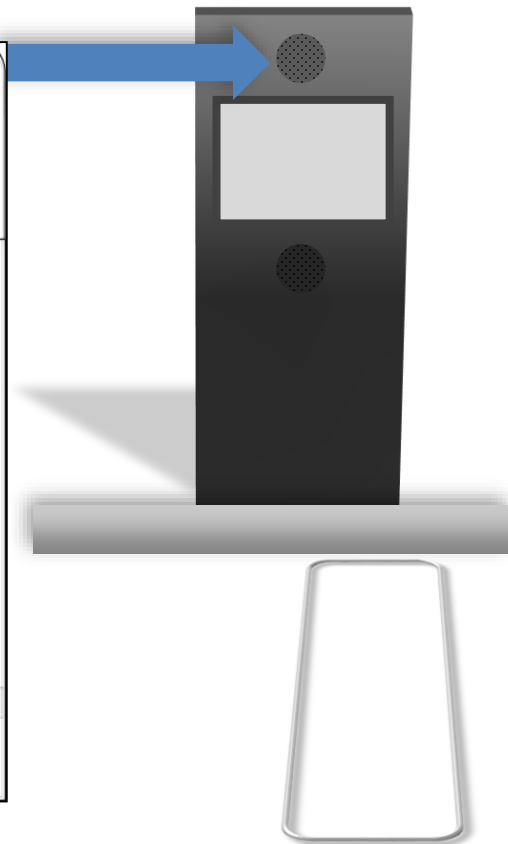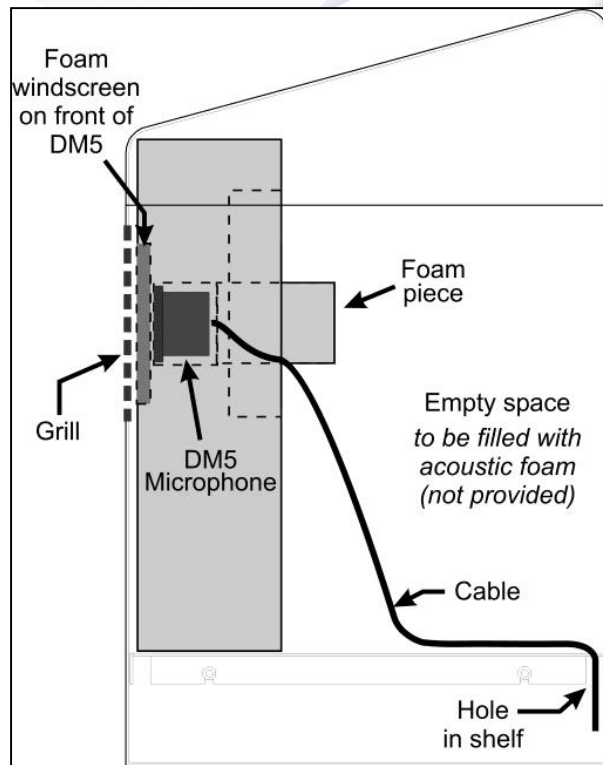


SPEAKER

1. No physical or mechanical mounting
2. Completely float in acoustic foam
3. Push all the way forward
4. Must use foam gasket
5. Fill empty space with acoustic foam

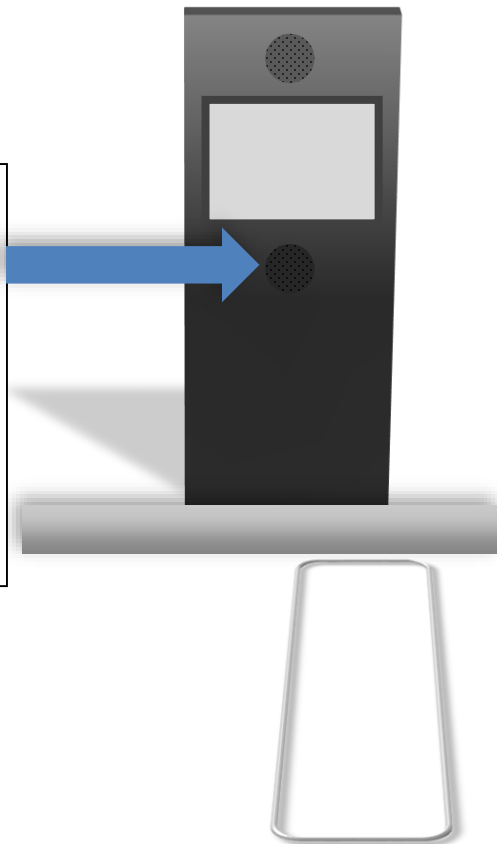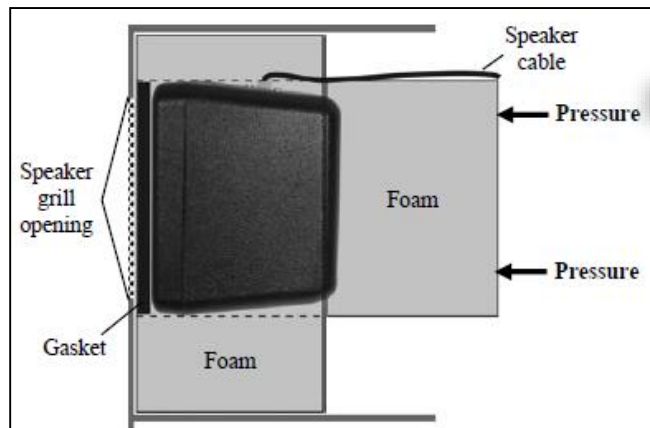


LOOP

HME headset and timer systems require the ability to detect when vehicles arrive at critical areas in drive thru for their normal operations. This will allow the headset system to let an order taker know when a vehicle has arrived at an order point and it allows the timer systems to track vehicle activity throughout the drive thru experience.

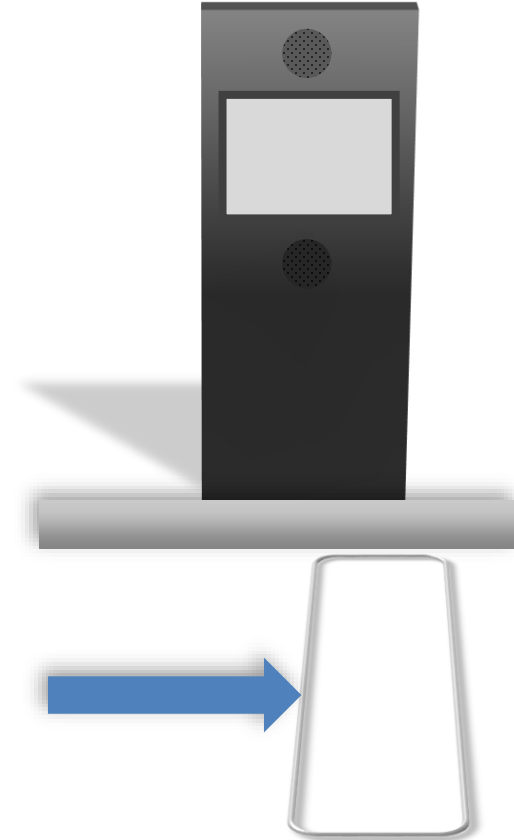

LOOP

The most common method of providing vehicle detection is by using an underground magnetic inductance “loop”. These sensors are essentially metal detectors that utilize an invisible magnetic field that change when a large enough mass of metal is near them.

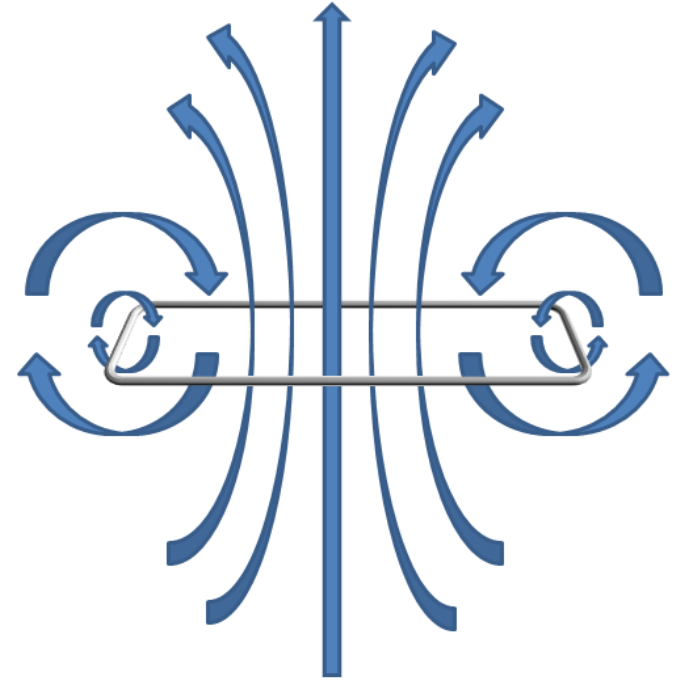

LOOP POSITION

1. Where should the loop go?
2. No metal within 3 feet of the loop
3. Positioned middle and forward
4. What's the effect of having the loop in other positions?





HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

LOOP POSITION




TYPES OF LOOPS


1. Sawcut
2. Prefab



SAWCUT LOOP

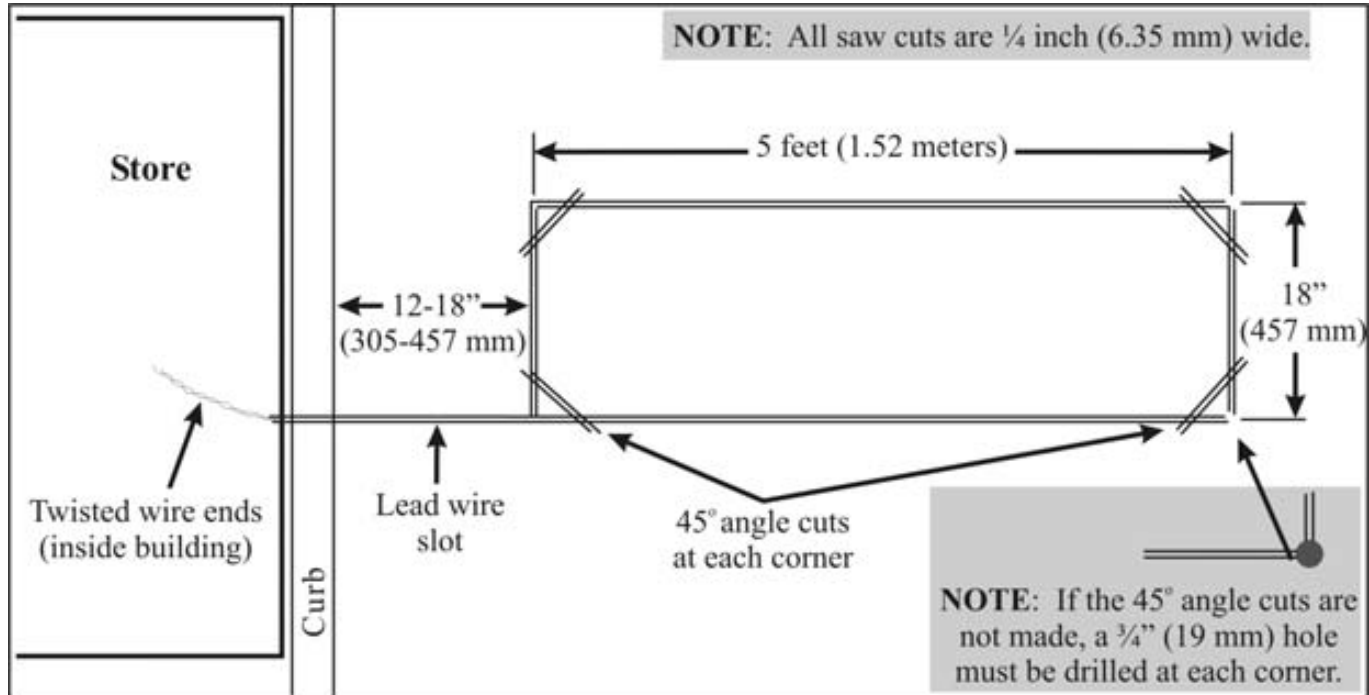

SAWCUT LOOP

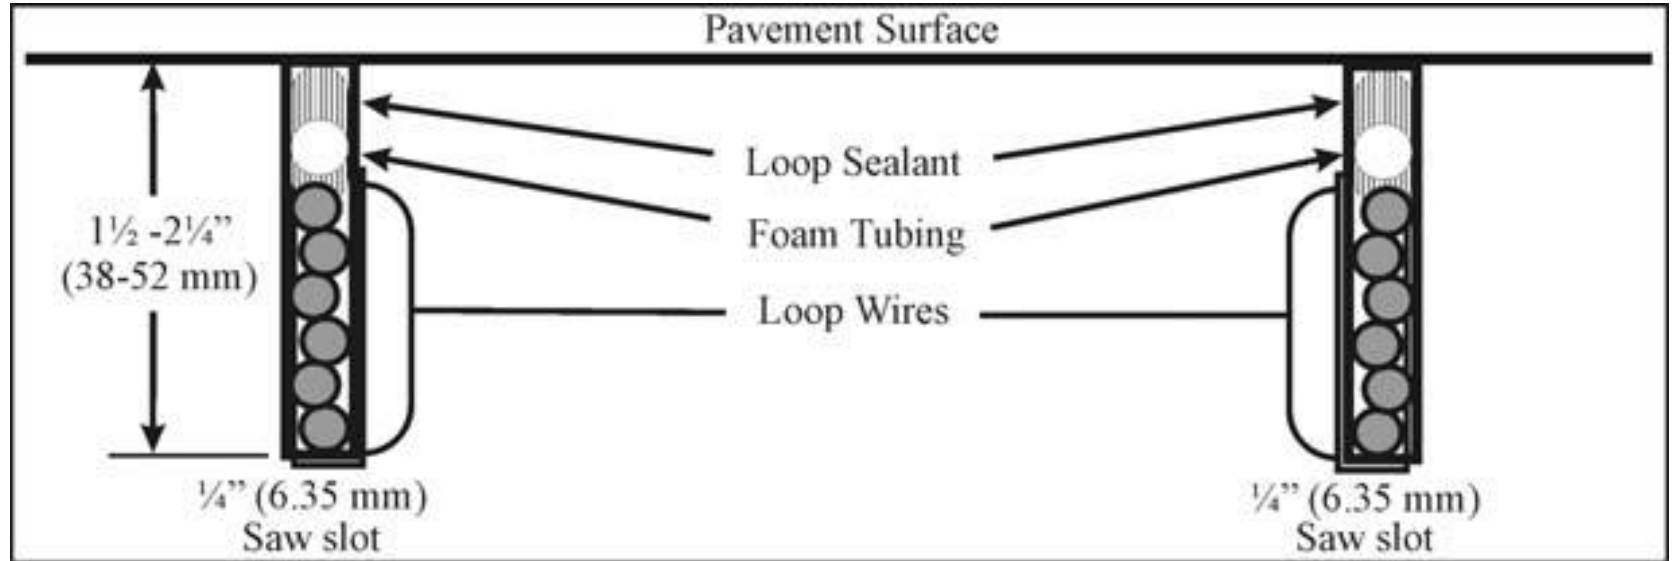

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

WHAT NOT TO DO



POP QUIZ!



How many components are located outside the store?

3. Microphone, speaker and loop.

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS





HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS




PREFAB LOOP

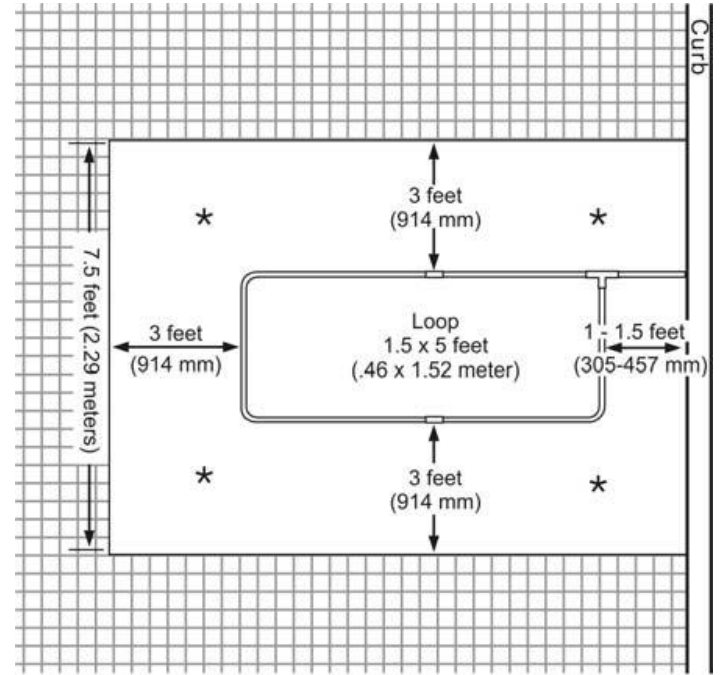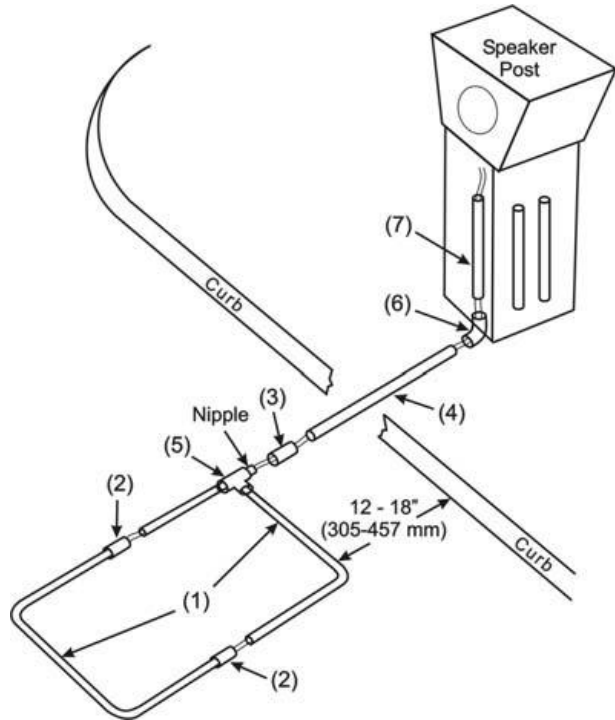

* Area free of rebar, wire screen, reinforcing bars, electrical cable or metal objects

PREFAB LOOP

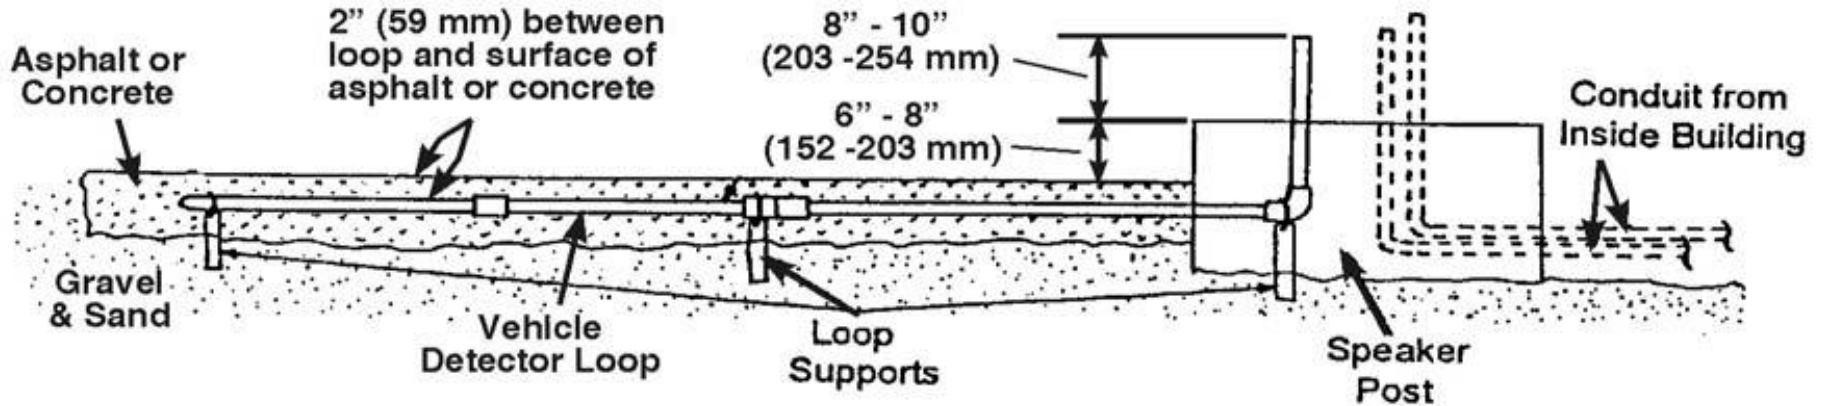

METERING A LOOP

At the loop

- Microhenries (100 μH – 150 μH)
- Resistance ($\sim 1 \Omega$)
- Megohms (+50M Ω and steady)

At the VDB

- Microhenries ($\sim +20 \mu\text{H}$ per 200')
- Resistance ($\sim +1 \Omega$ per 200')
- Megohms (do NOT meter here)

By comparing the microhenries and resistance readings at both locations, you can determine if there is a problem with the lead-in cable, the loop or both.

If you don't have the ability to get all required readings at the loop and at the VDB, do not accept any work orders until you purchase the appropriate meters.

SUGGESTED METERS




Extech 380193
Passive Component LCR Meter
Inductance and Resistance



Extech 380360
Digital Megohmmeter
Megohms

OUTSIDE THE STORE


1. Only pull cable in unoccupied conduit
2. Use 2 HME cables (Belden 8723 **ONLY**). We ship 2, 200' spools.
 - First cable: Microphone only (**BLACK**, **RED** and **GROUND**)
 - Second cable: Speaker (**GREEN/WHITE**) and Loop (**RED/BLACK**)

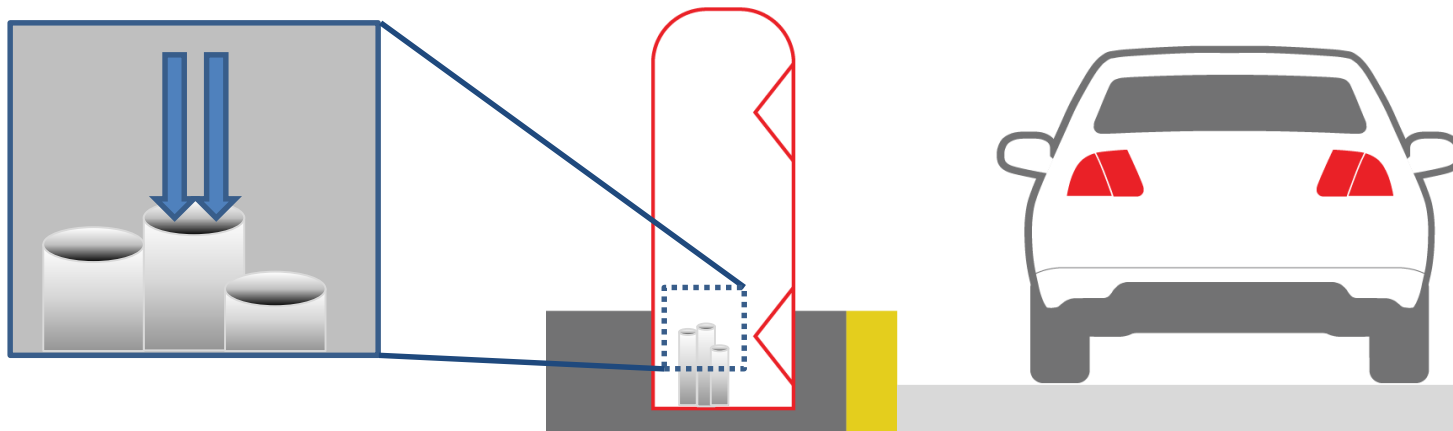

OUTSIDE THE STORE

3. Mic and Loop connections:


- Soldered
- Crimp capped (no wire nuts or taped connections)
- Insulated with electrical tape
- Tie wrapped for strain relief
- Loop wires and connected loop wires must be twisted.
- All unused ground/wires and foil must be clipped back

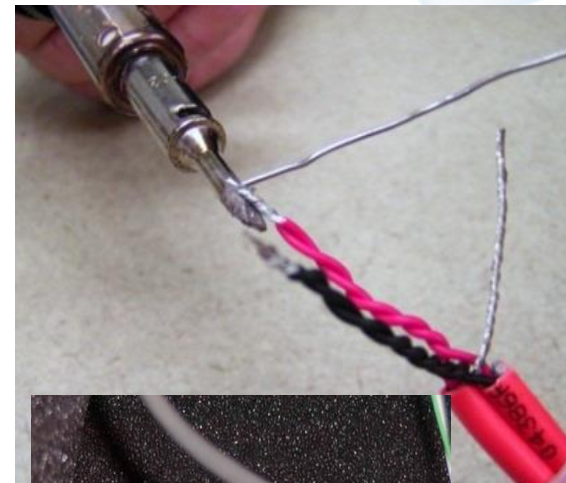

OUTSIDE THE STORE

4. Speaker connections:

- Strip back the cable to have enough length to have green and white go to speaker and red and black go to the loop
- Wires must be stripped back far enough to be terminated into the connector, but not so far back to expose wires
- Screw down the wires tight enough so they don't easily come out
- All unused ground/wires and foil must be clipped back

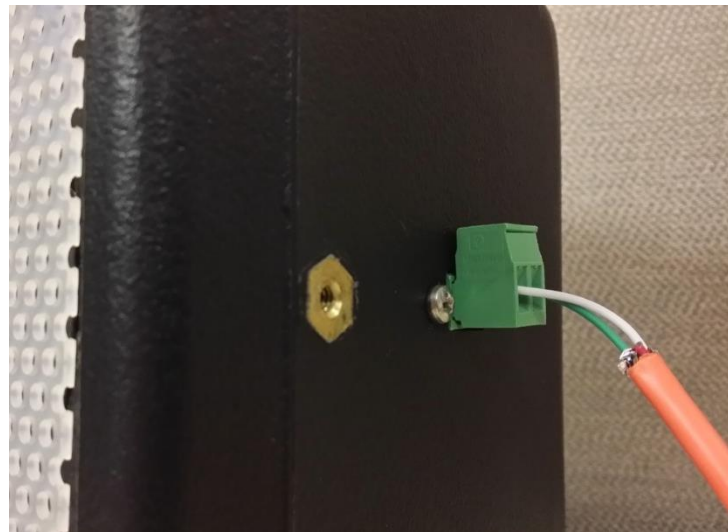

POP QUIZ!




The speaker needs to be in its own cable. True or false? Why?

False. The microphone needs to be in its own cable.

IN-BETWEEN

Cable pulling:


1. Coordinate your efforts with store manager or GC to have the smallest impact on operations
2. Determine the base station location for your cable pull destination
 - Commonly in the present window
3. Locate the entry point from the conduit outside and assess any potential cable pulling difficulties
 - Avoid possible sources of interference like electrical panels
4. Use pull string or existing cables as the pull string
 - Try to move it to determine condition of conduit
 - Silicone may be used to help pull cable in difficult situations
 - No movement might indicate crushed or blocked conduit. Contact your HME Install Coordinator for resolution.

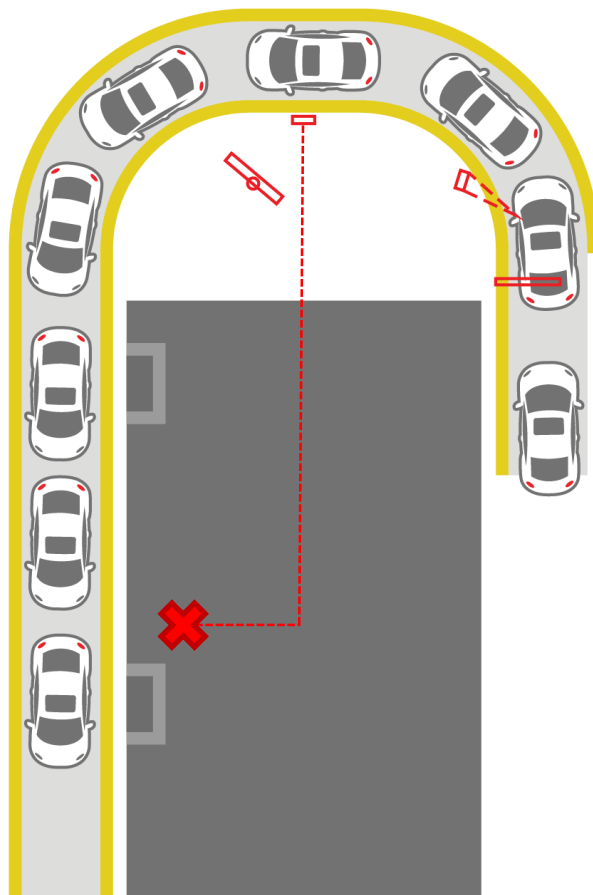

IN-BETWEEN

Cable pulling:


5. Do NOT create any splices on the cable run. Only homerun cable runs are allowed.
6. Don't leave large service loops. It will make another loop and cause detection problems.
7. Repeat this process for the second order point, if present.

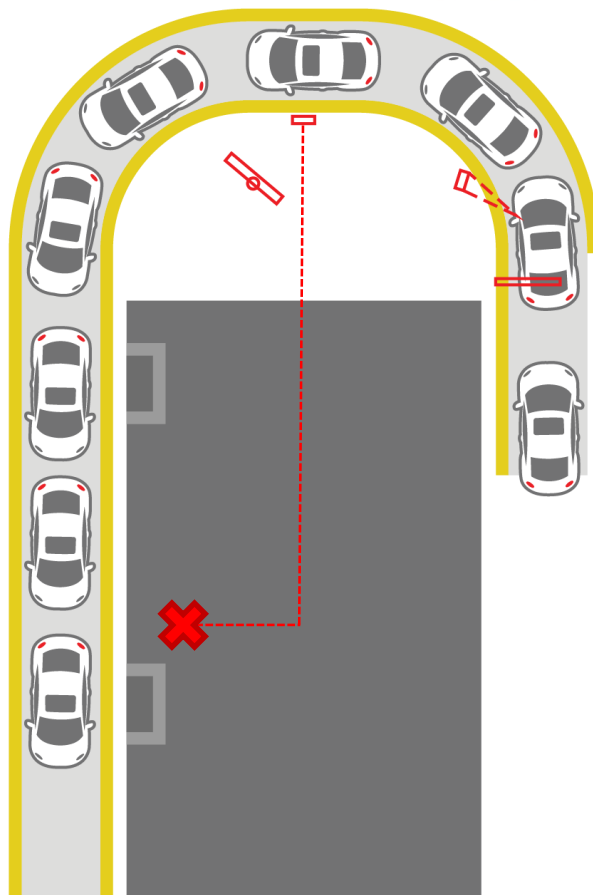

INSIDE THE STORE

Mounting the Base Station:

1. New installations or system upgrades: base station is commonly located in the present window. Customer requests should be considered as long their request would not impact the warranty or operation.
2. No higher than 72" from the ground, accessible and serviceable by store employees
3. Keep away from any possible sources of interference like Wi-Fi routers or other wireless equipment
4. Avoid sources of heat and being boxed in around stainless steel
5. All cables must be ran in the wall or in Panduit

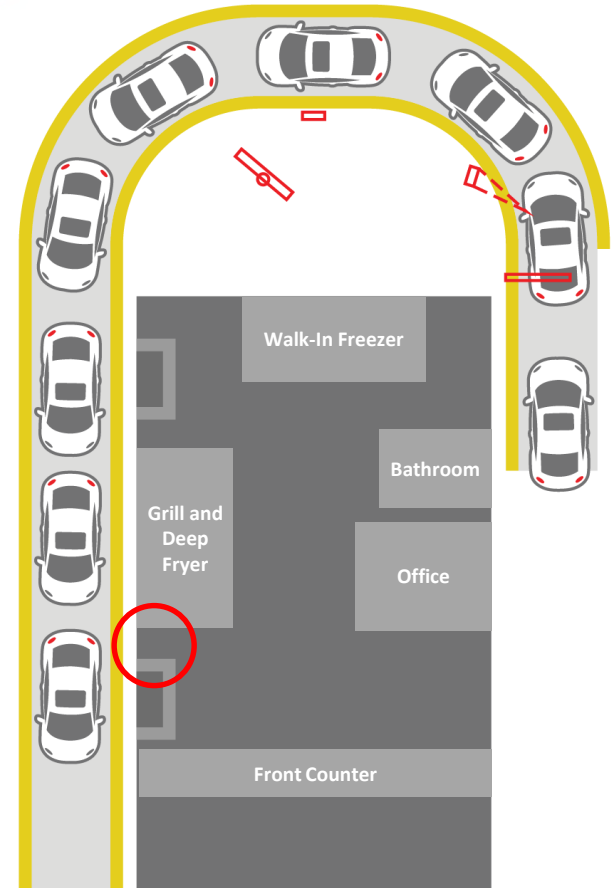

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS


WHAT NOT TO DO




INSIDE THE STORE

Wiring the Base Station:


1. Clip all foil and any unused wires
2. Trim the foil and wires back far enough so that they can't accidentally short or touch anything
3. Trim/strip/cut anything away from the board to prevent potential shorting
4. Strip back the cable only to the length of wire that you need
5. Strip back the wire far enough to terminate in the connector but not so far they have exposed wires coming out of the connector

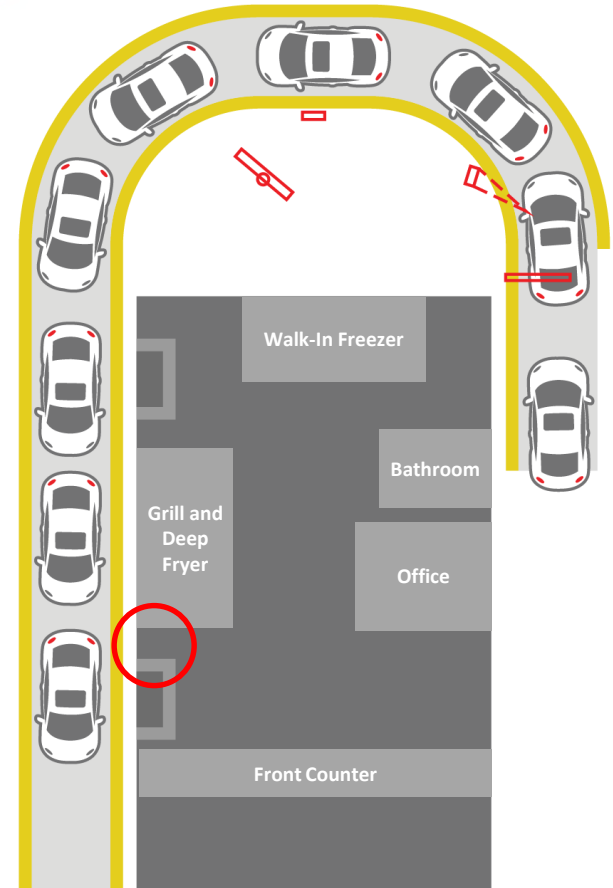




WHAT TO DO

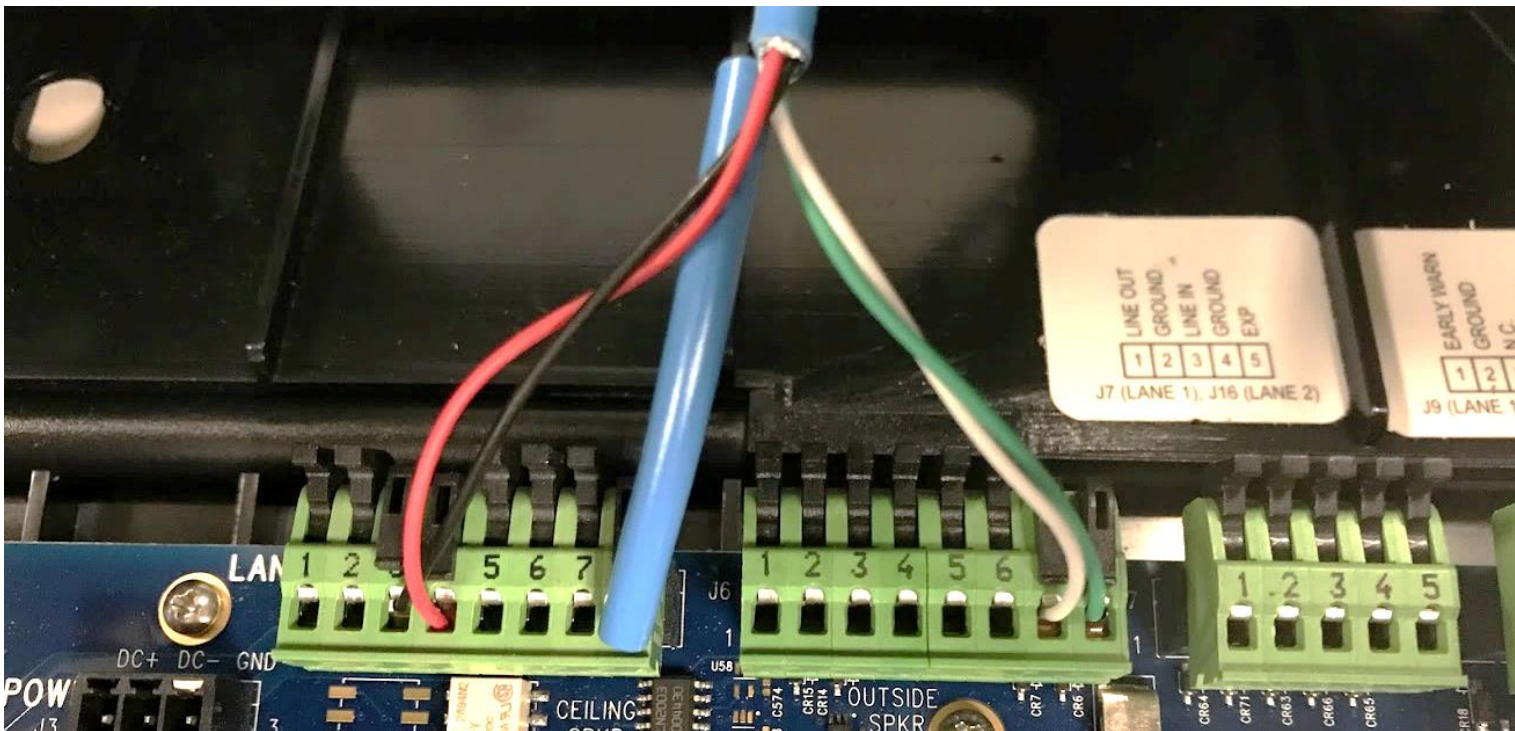

WHAT NOT TO DO

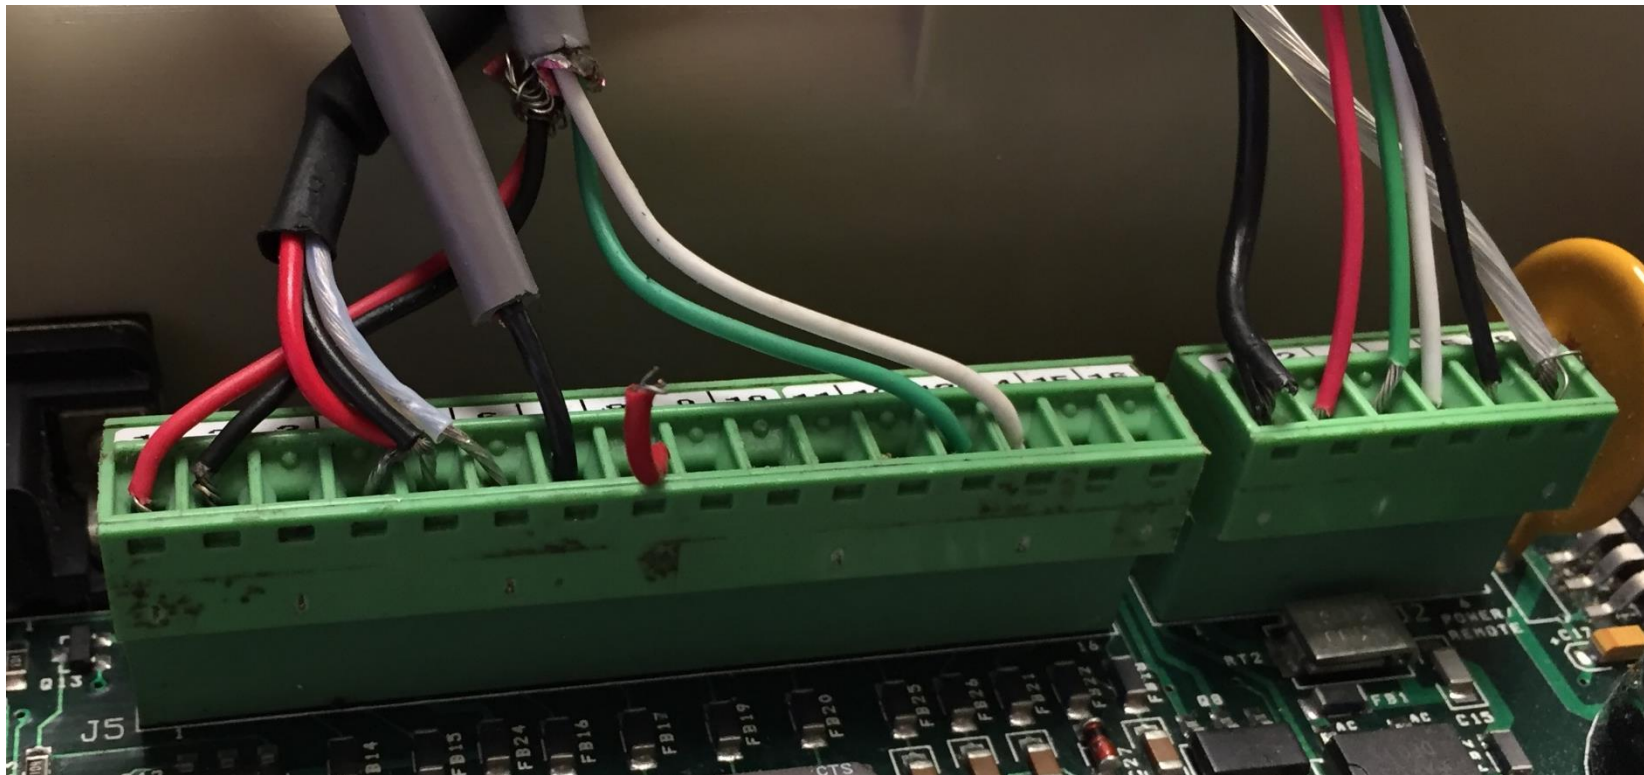

INSIDE THE STORE

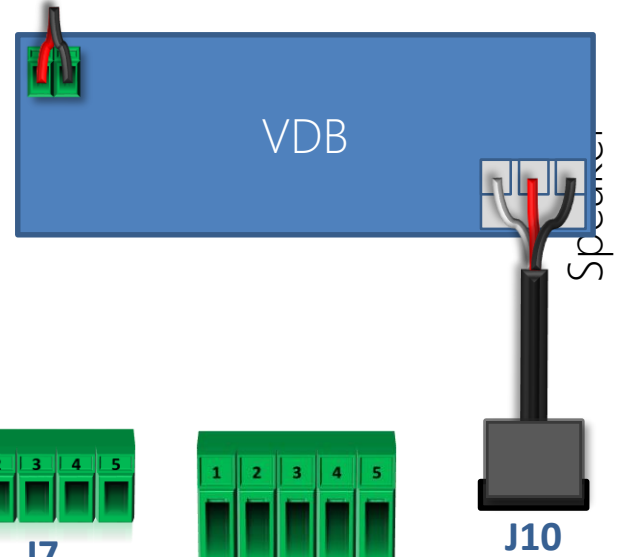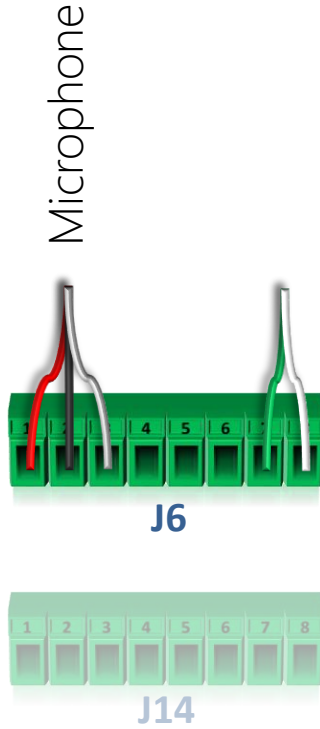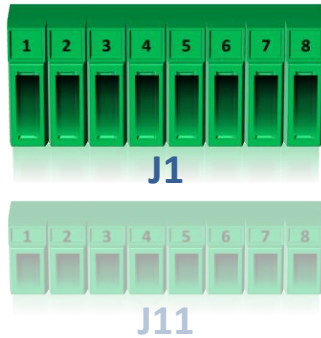

EOS | HD



OVERVIEW

- HD Audio
- 2.4 Ghz operation (full, upper or lower spectrum)
- Non-HD mode for legacy headsets
- Registers up to 15 headsets
- 4 can talk at the same time (3 in dual lane/A2)
- All software driven adjustments
- Networkable (DHCP on by default)
- Message Center
- Extended antenna kits



NAVIGATION




1) HEADSET REGISTRATION

Menu – Register headsets – Register headsets – Register Multi





Push the Back button when completed.

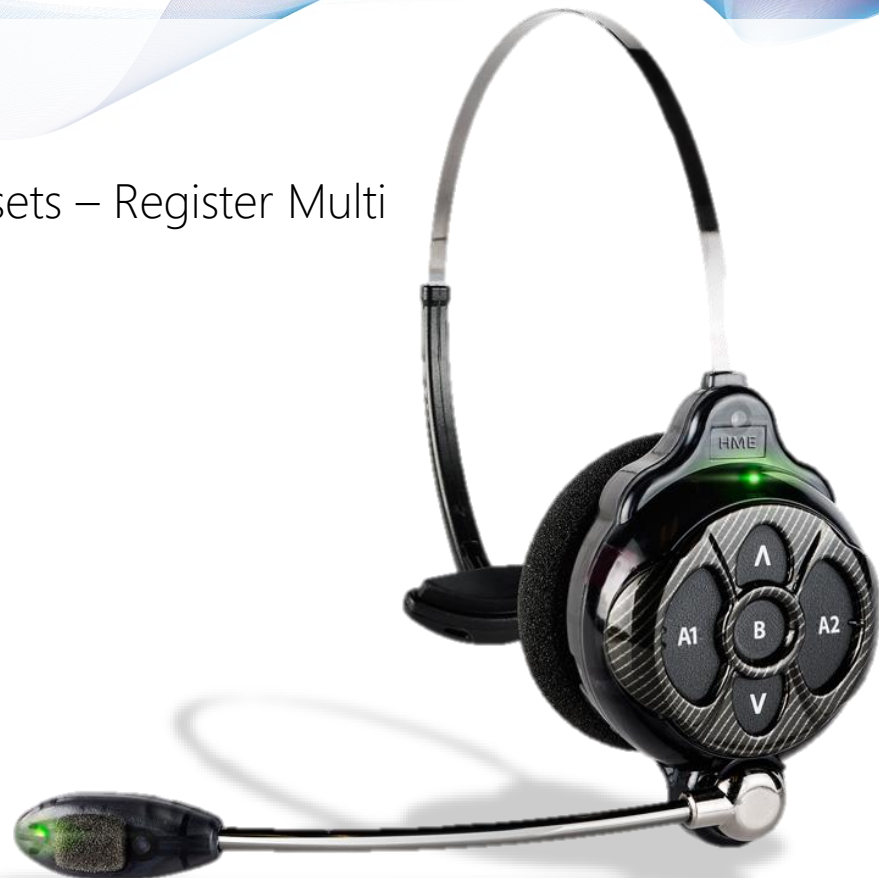

2) DATE AND TIME


Menu – More – Store settings – Set date/Set time

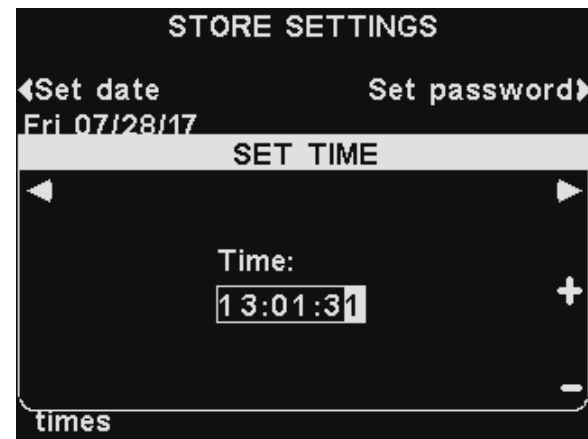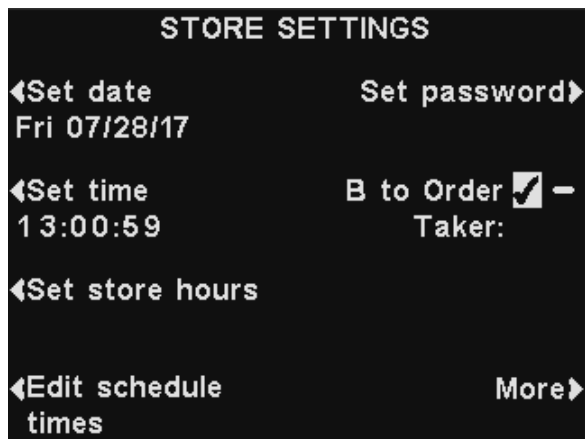

Date format is month, day and year. Time format is 24-hour, not 12.

3) STORE HOURS


Menu – More – Store settings – Set store hours

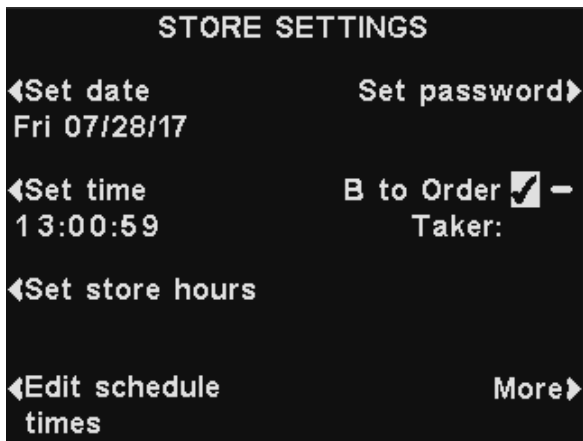

If the store is programmed to close, the Store is Closed message will play outside during that time.

4) ADJUST INBOUND AND OUTBOUND

Menu – Volume adjust – In/Out-bound audio

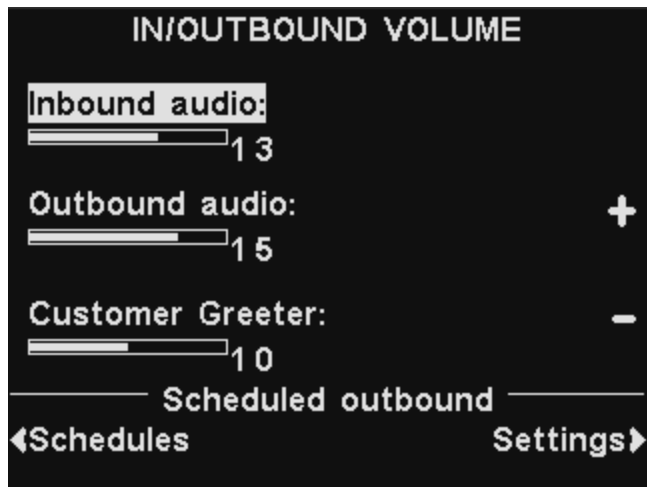


Power cycle a headset and listen to an order being taken by a store employee. Listen to the conversation between them and:

1. Adjust the inbound until the customer outside sounds similar in volume to the order taker.
2. Go outside and listen to the order taker at the speaker post while they're talking to the customer. Adjust outbound so it's loud enough to be similar to having a conversation with someone in front of you.

5) SAVE INSTALLER SETTINGS

Menu – More – Installer setup – Password B9B9 then Continue – More – Save installer

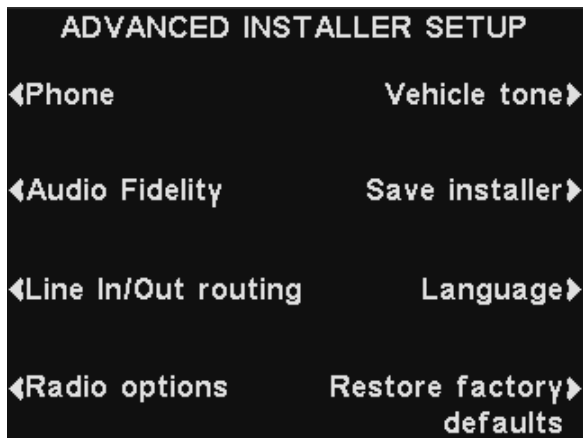

This will save a local default of your settings that the store can recall under:
Menu – More – Store settings – More – Restore installer settings

ADDITIONAL TOPICS

In the handouts, you will find additional topics, such as:

1. Clearing Registration
2. Wiring Diagrams
3. Setting up the Message Center
4. Networking the Base Station
5. Extended Range Antennas
6. Advanced RF
7. Troubleshooting





HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

QUESTIONS?

The headset system quiz is next!

AGENDA

Drive Thru Audio




Drive Thru Optimization System (DTOS)



WHAT IT IS

HME's Drive-Thru Optimization System combines ZOOM, CLOUD, and Leaderboard to offer the industry's most comprehensive drive-thru management system. Whether a customer is identifying bottlenecks at the store level or comparing the performance of multiple stores, HME provides unparalleled visibility into a customer's entire enterprise.

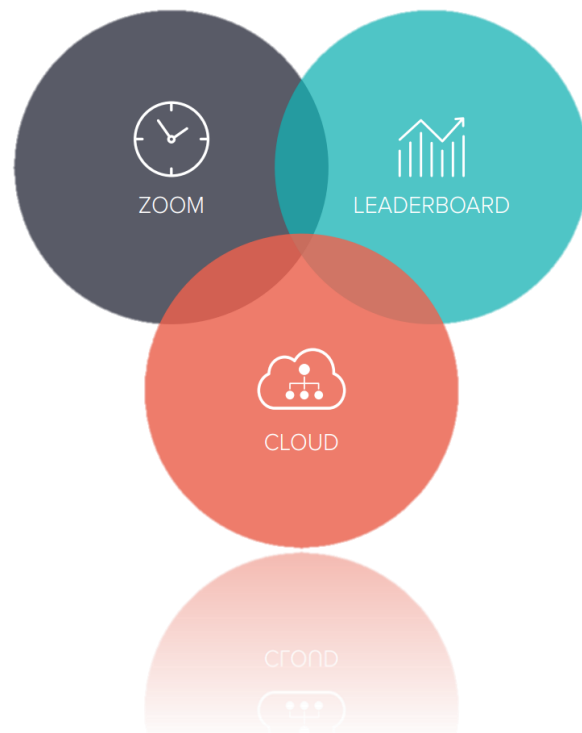

ZOOM DRIVE THRU TIMER

Real-Time Data For Immediate Results

- Provides a real-time picture of your entire drive-thru at the store level
- ZOOM's intuitive multi-color dashboard allows managers and crew members to instantly identify bottlenecks and take immediate action to speed things up






ESSENTIAL CONNECTIONS

Any loops other than order points



USB Connection

ZOOM Dashboard

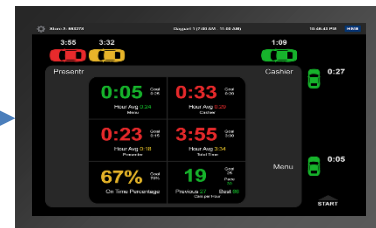

Menu detection and greet from the Base Station



USB Mouse
Ethernet Network

Microphone
Speaker
Loop



Leaderboard

A digital display showing a leaderboard with columns for Store, Rank, Time, and Score. It lists top performers for the current hour and day.

| Store | Rank | Time | Score | Current Hour | Current Day | | | |
|----------------|-------|-------|-------|--------------|-------------|-----|-------|----|
| 1 | 11456 | 03:30 | 26 | 82:39 | 85 | 900 | 83:54 | 88 |
| 2 | 37902 | 03:30 | 16 | 82:36 | 80 | 809 | 82:36 | 89 |
| 3 | 37195 | 03:30 | 18 | 82:49 | 79 | 869 | 83:12 | 84 |
| Store 2002 | | | | | | | | |
| 9 | 3328 | 03:30 | 18 | 83:59 | 30 | 764 | 83:48 | 45 |
| 10 | 18187 | 03:30 | 26 | 83:03 | 50 | 900 | 83:47 | 87 |
| 11 | 26402 | 03:30 | 28 | 83:03 | 34 | 840 | 82:48 | 75 |
| 12 | 4819 | 03:30 | 22 | 83:44 | 45 | 866 | 82:38 | 83 |
| 13 | 8488 | 03:30 | 16 | 83:59 | 56 | 581 | 83:24 | 57 |
| Store 3 Stores | | | | | | | | |
| 10 | 33425 | 03:30 | 24 | 84:17 | 42 | 875 | 83:25 | 59 |
| 20 | 6314 | 03:30 | 24 | 84:58 | 50 | 756 | 82:46 | 18 |
| 21 | 6805 | 03:30 | 18 | 84:51 | 33 | 801 | 83:38 | 53 |

TSP50 HIGHLIGHTS

- Handles up to 8 sensor inputs
- Utilizes a direct, 15' (4.6 meter) USB connection to the CU for power and data connection
- Contains a built-in VDB on the motherboard tied to V1
- Can install up to 3 additional VDBs
- No external power supply needed unless installing 2+ additional VDBs




HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS




Top VDB Standoffs
(1 per VDB)


Bottom VDB Standoffs
(2 per VDB)

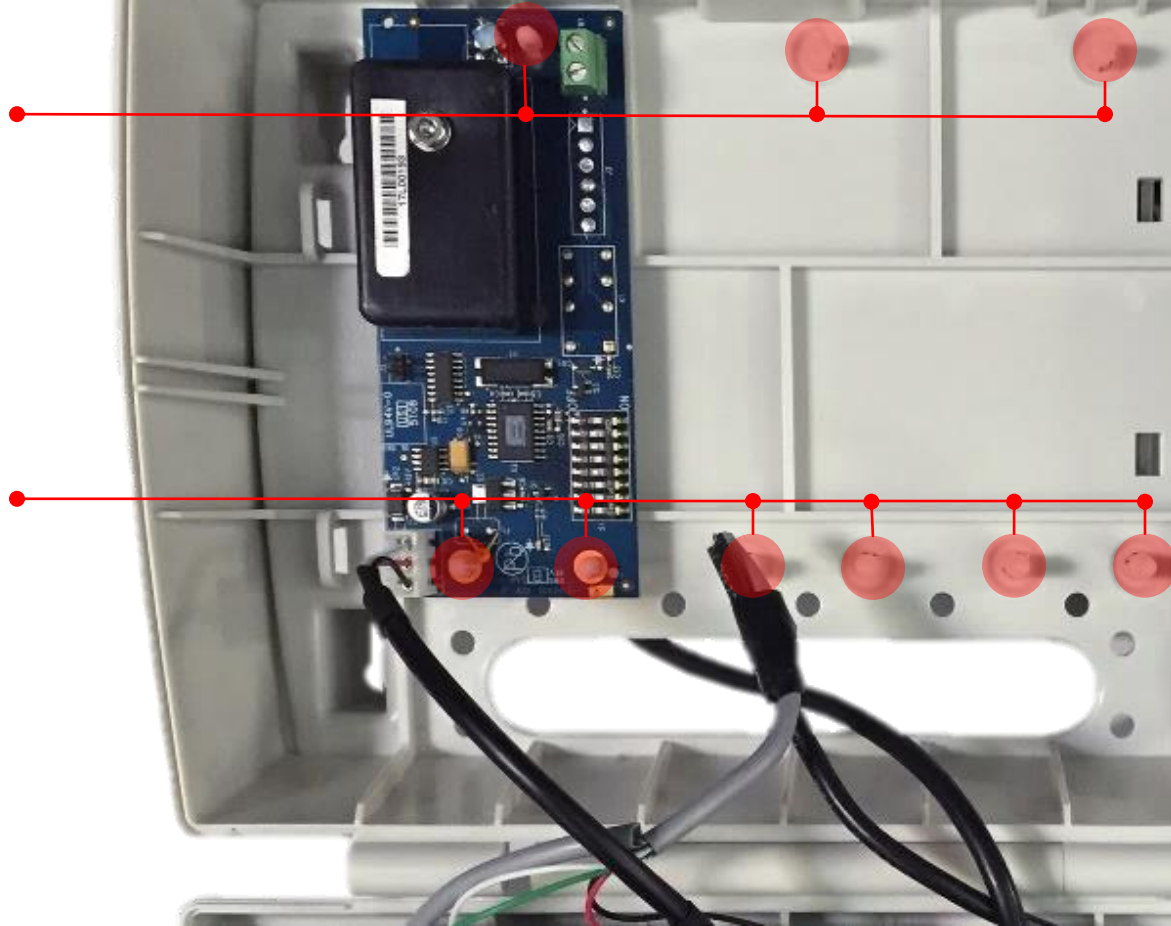

Cable management tie loops. Option to use a "zip tie" or tie wrap to assist in cable management.

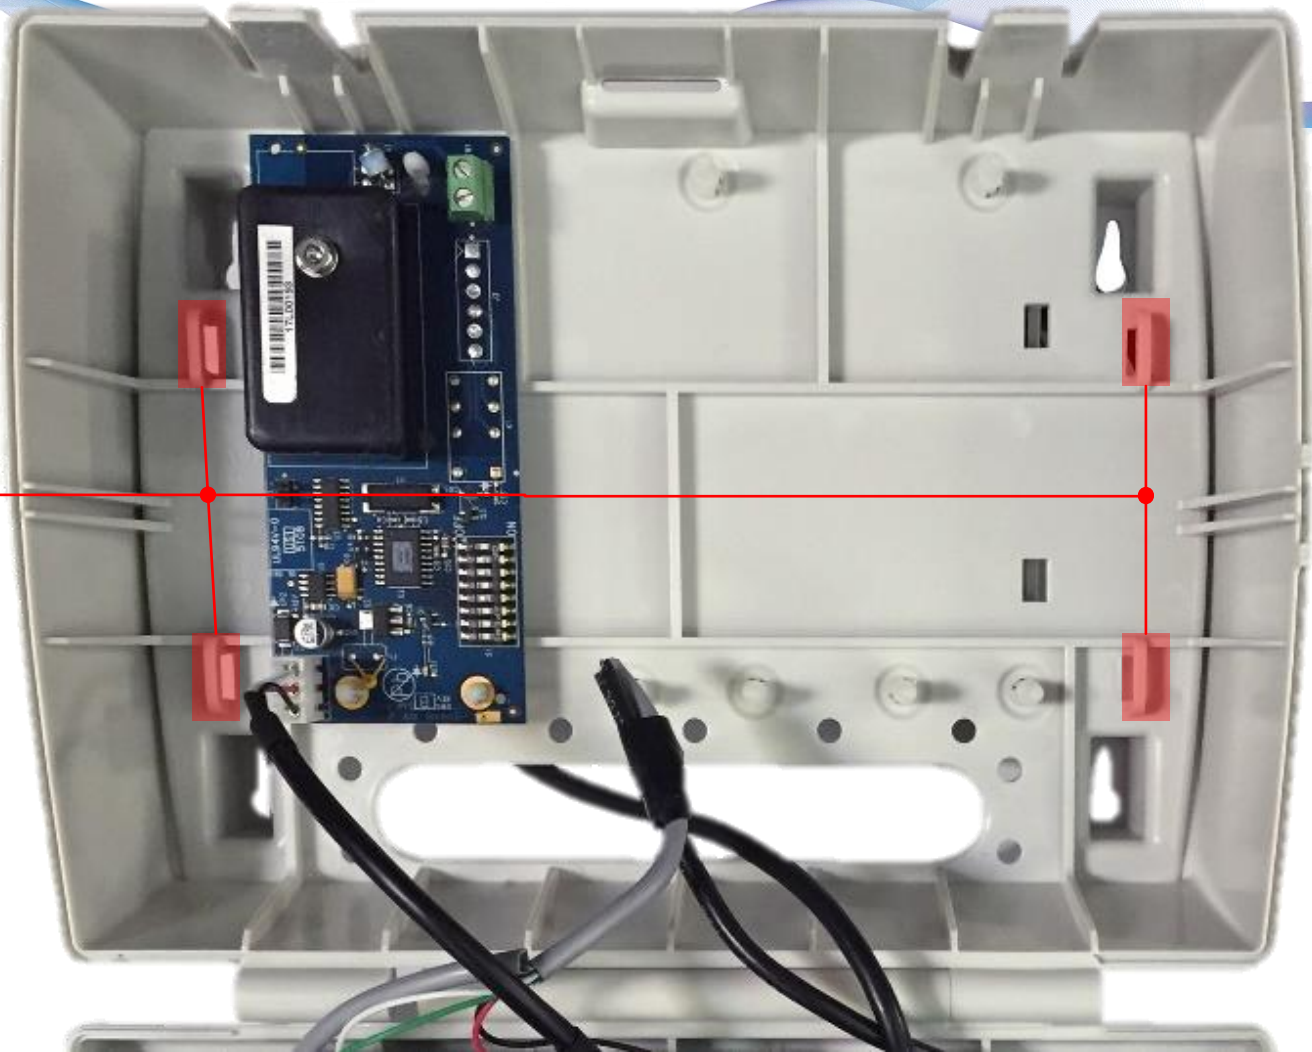

Cable management wrap holes. Option to use a "zip tie" or tie wrap to assist in cable management.

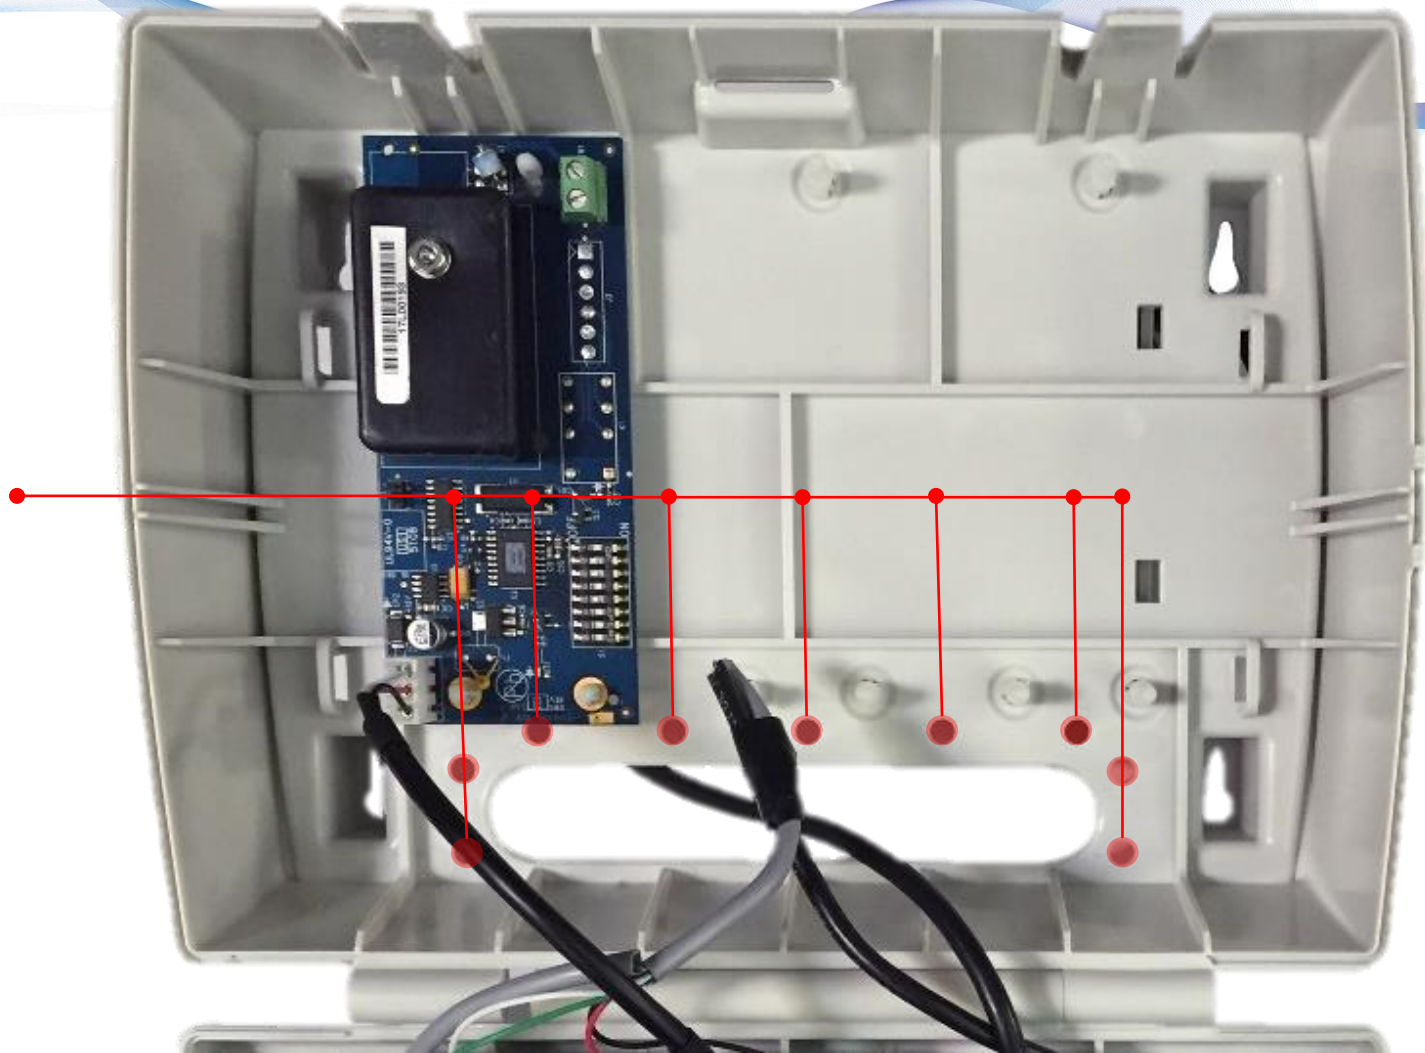

Ext Power Supply
(+12V supply only when
installing 2+ VDB boards)

Vehicle 6-8,
Greet A+B


Vehicle 1-5

Loop for Internal VDB

Detection Polarity
(All switches down)

USB to CU50

VDB Dip Switches
(Switches 2, 3 and 5 down)

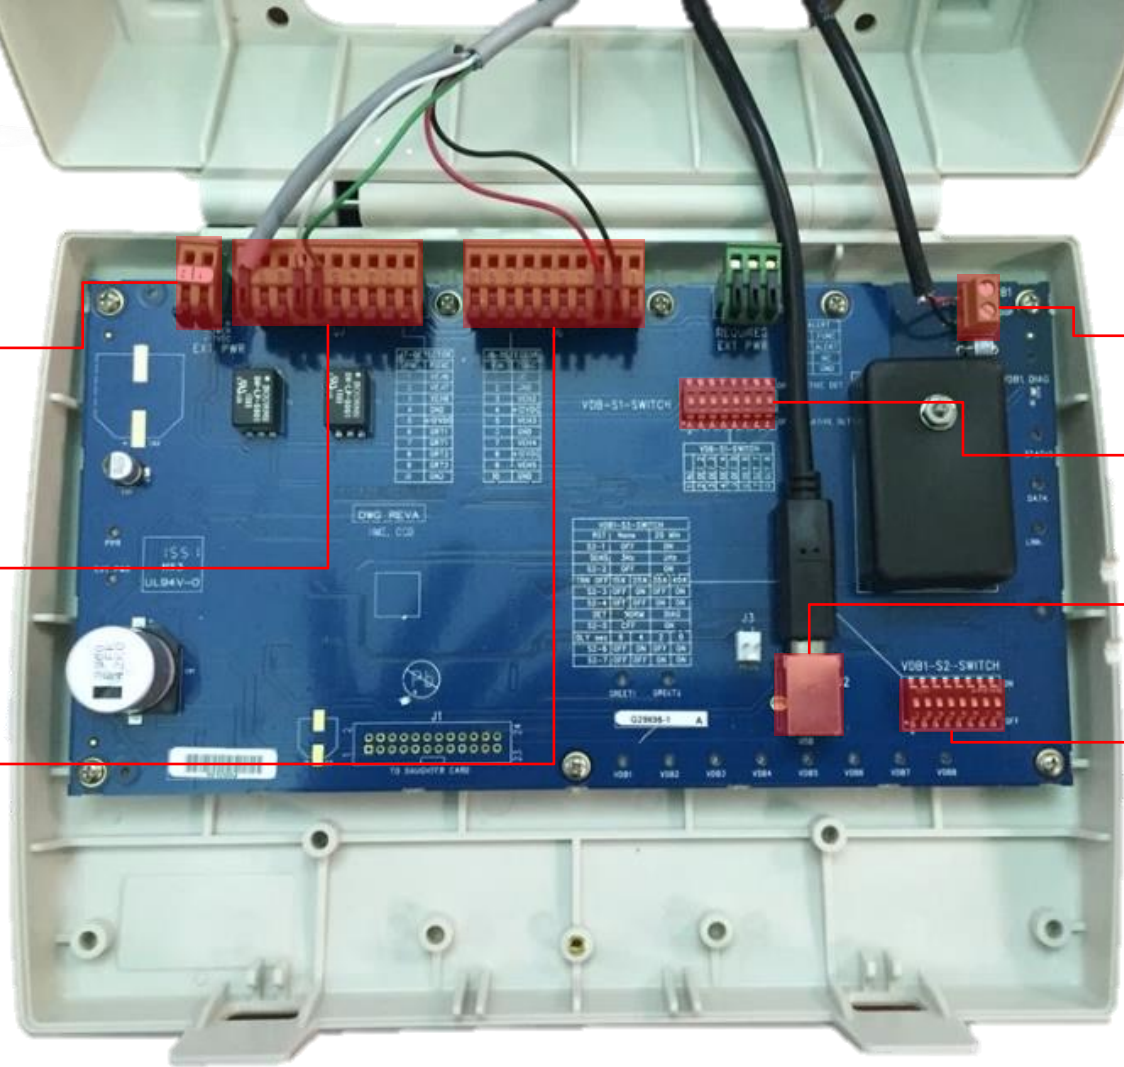

CU50 HIGHLIGHTS

- Linux operating system
- Small profile (5.5" x 5.5" x 2.5")
- Wall mounted typically behind the monitor(s)
- External power supply
- Fanless design
- Solid-state HDD



WALL MOUNT

1. Orient the wall plate to the back of the CU50 as seen to the picture to the right
2. Using the supplied 2 short screws, screw the wall plate to the back of the CU50
3. Use the 4 far corner holes to screw into the wall using the supplied mounting hardware



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

TSP50 USB
Connection



Do not
remove the
top USB
connection
plug or
utilize it for
the TSP50
connection

Zoom[®]
Drive-Thru Timer


HME HM Electronics, Inc.
14110 Stowe Dr.
Poway, CA 92064 U.S.A.
CU50 CONTROLLER
3.1 A.3.00
G29797-1AA2 Rev B
3720226A

Dashboard

USB Mouse

Power

Do not
remove the
right network
connection
plug or utilize
it for the
network
connection

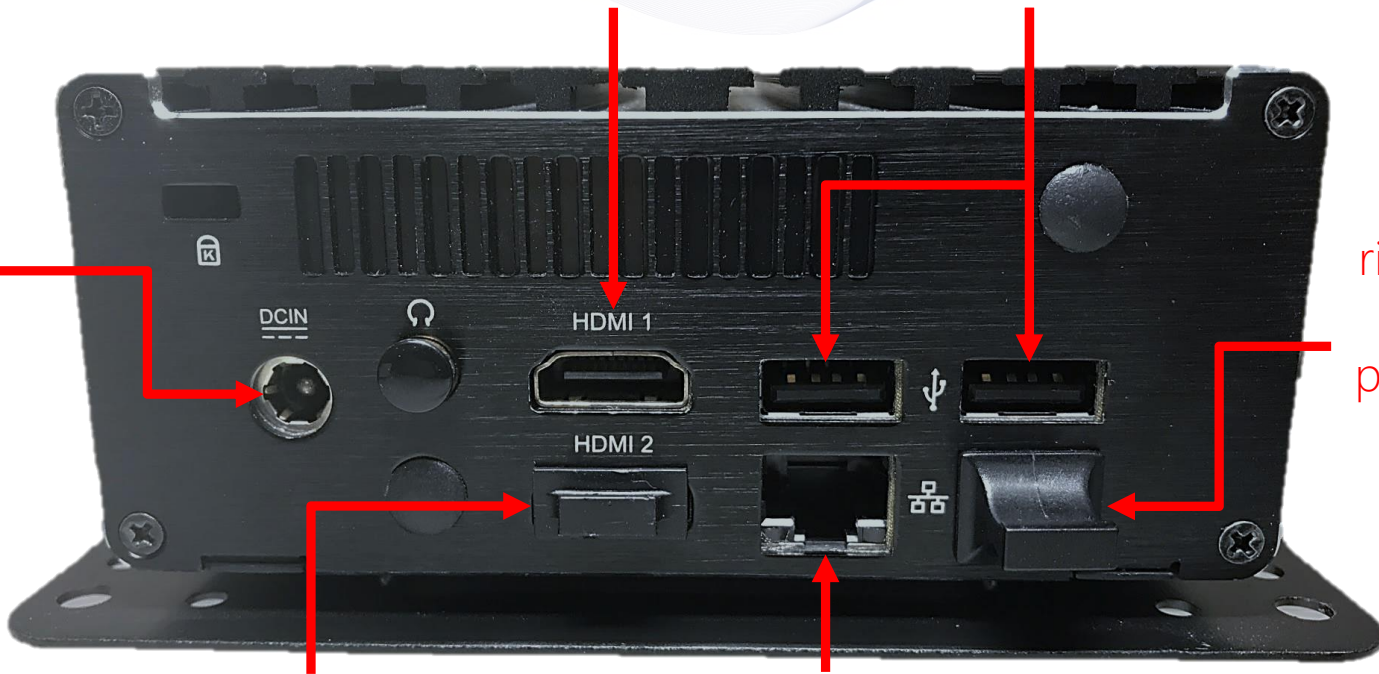

Leaderboard
(plugged by default)

Network
Connection

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS


FULLY WIRED



EOS|HD TO TSP50




J3

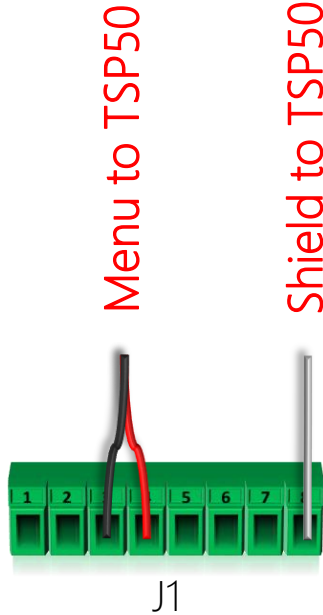

J1



J11

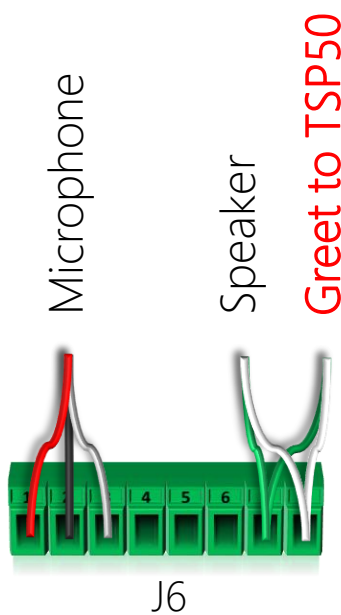


J6



J14




J7

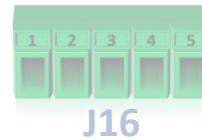


J16



J9

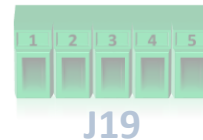

J19

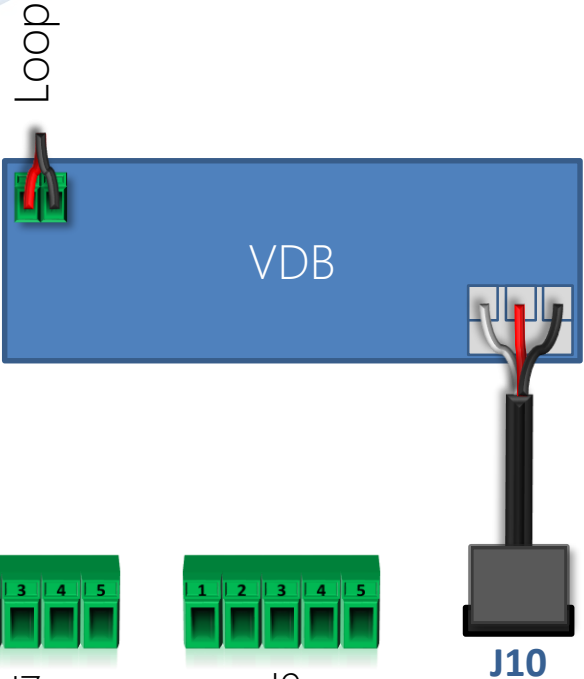


J10



J20

TSP50 – SINGLE LANE, 1 WINDOW

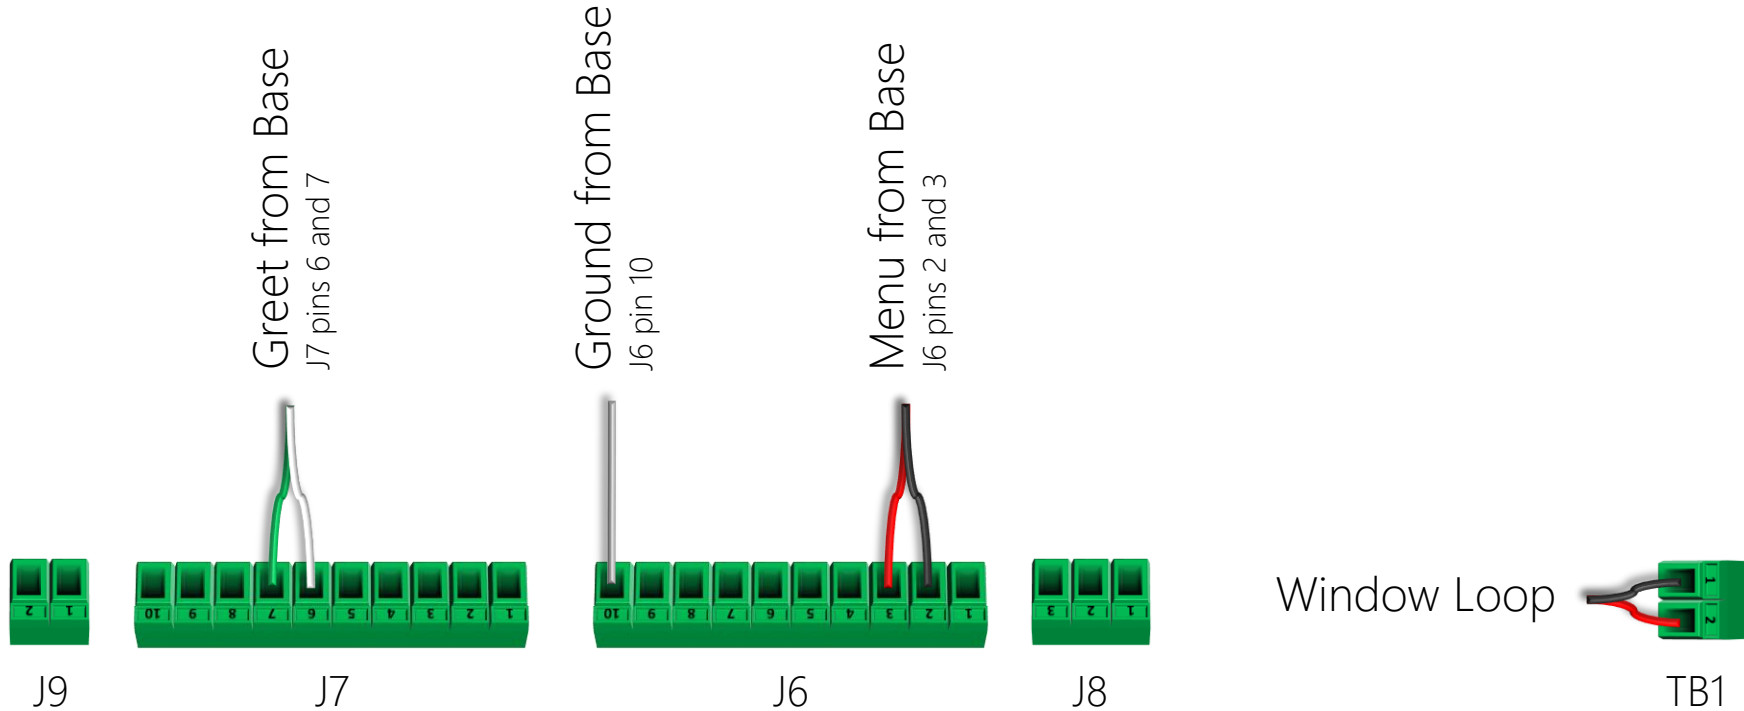

Click the EDIT button to modify settings.


HELP

EDIT

Max Cars In Lane = 9

| Detector Type | Event Name | TSP Detector | Delay | Queue Size |
|---------------|------------|--------------|--------|------------|
| ON | Order | Veh 2 | 0 secs | 7 Cars |
| Greet | Greet | Greet A | 0 secs | |
| ON | Window | Veh 1 | 0 secs | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |

TSP50 – SINGLE LANE, 2 WINDOW

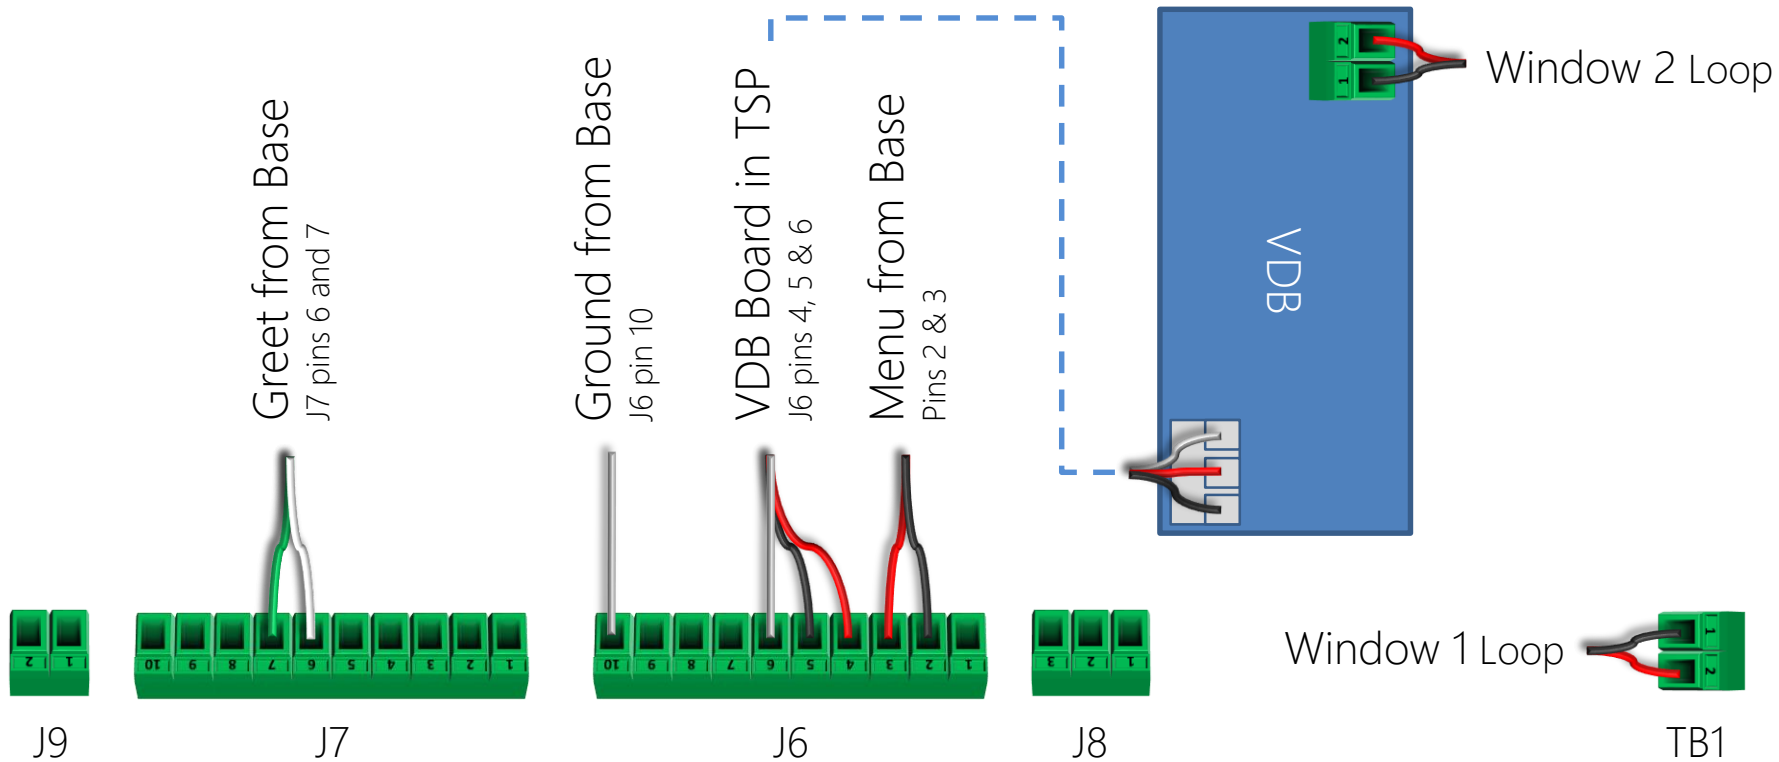

Click the EDIT button to modify settings.


[HELP](#)

[EDIT](#)

Max Cars In Lane = 12

| Detector Type | Event Name | TSP Detector | Delay | Queue Size |
|---------------|------------|--------------|--------|------------|
| ON | Order | Veh 2 | 0 secs | 7 Cars |
| Greet | Greet | Greet A | 0 secs | |
| ON | Cashier | Veh 1 | 0 secs | 2 Cars |
| ON | Presenter | Veh 3 | 0 secs | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |
| OFF | | | | |

TSP50 – Y-LANE, 2 WINDOW

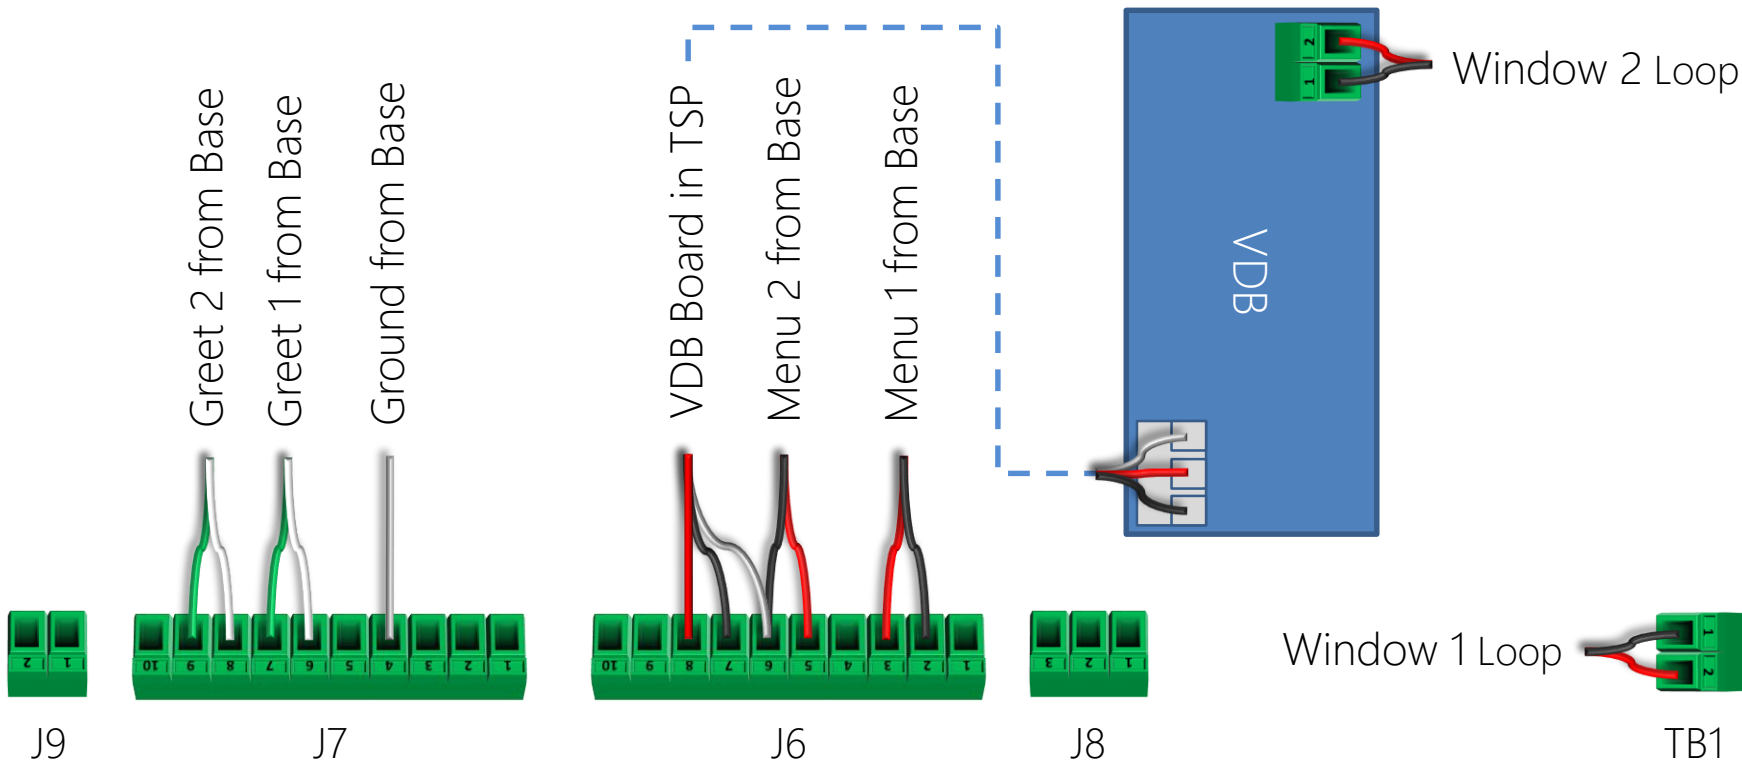

START INSTALL

1 Welcome to the ZOOM Installation Wizard:System Version: **3.6.11 (OS v5.3.7)**Settings Version: **E.3.6**

These steps guide you through system installation.

Use navigation buttons to the left to complete steps.

2 Click the NEXT button. NEXT EXIT

SET TIME & DATE

1 Click the EDIT button to set Time & Date.

 EDIT**System Date & Time Setup**

| | |
|----------------------|-----------------------------|
| System Date: | August 7, 2017 |
| System Time: | 5:19 PM |
| Time Zone: | (UTC-06:00)-America/Chicago |
| Language and Region: | English (United States) |
| Custom Time Format: | 12-hour |

2 Click the NEXT button.

 NEXT BACK EXIT

CONNECT TO CUSTOMER NETWORK

- 1 If customer network is not available, click the NEXT button
- 2 If installing on the customer network, follow the steps below:
 - a. Locate the connection point to customer's network
 - b. Connect CU & TSP to the customer's network.
 - c. Reset power to the TSP:
 - d. Reset power to the CU: **RESET CU**
- 3 To skip click NEXT

 NEXT BACK EXIT

TSP & CU NETWORK SETTINGS

REFRESH

1 TSP is **Connected****2** Click the NEXT button to continue or use the menus below to change to the desired network configuration.

| TSP Connection: | | Control Unit Network Settings: | |
|------------------|-------------|--------------------------------|----------------------|
| Connection Type: | TSP50 (USB) | DHCP: | Enabled |
| | | IP Address: | 10.10.13.178 |
| | | Subnet Mask: | 255.255.254.0 |
| | | Gateway: | 10.10.12.1 |
| | | DNS Server: | 10.10.1.100 |
| | | Data IP Port: | 3255 |
| | | Web Server Port: | (80, 8080, or 59427) |

3 Click the NEXT button to continue.

NEXT

BACK

EXIT

DEFAULT SYSTEM

- 1 Check the number of lanes in the store drive thru.**
- 2 If Lane Configuration shown below matches the store, click the NEXT button
- 3 Otherwise, follow the steps below.
- 4 Select the Lane Configuration: and apply the changes by clicking the button below
- 5 Click the NEXT button.

 NEXT BACK EXIT

SET STORE INFORMATION

1 Click the **EDIT** button to set Store Information.



Store Information

| | |
|---------------------|------------------------|
| Store #: | 123 |
| Store Brand: | Other |
| Store Description: | |
| Week Begins On: | Sunday |
| Fiscal Year Begins: | January 01 (Month Day) |
| Store Address: | 14110 Stowe Drive |
| | Poway CA 92064 |
| | USA |

2 Click the **NEXT** button.



HME CLOUD

1 Click the **EDIT** button to modify settings.

REFRESH **EDIT**



HME CLOUD Settings

| | |
|------------------------|----------------|
| Connection Status: | Connected |
| Account Email Address: | nwylic@hme.com |
| Account Status: | Registered |
| Test Cloud Connection: | RUN |

2 Click the **NEXT** button.

 NEXT

 BACK

 EXIT

END-USER LICENSE AGREEMENT (EULA)**FOR HME ZOOM® TIMER (SYSTEM 50) SOFTWARE****IMPORTANT — READ CAREFULLY:**

This End-User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and HM Electronics, Inc. ("HME"). This EULA is a license, not a sale, of the software that is used with the HME ZOOM Timer (System 50) (the "DEVICE"). That software is referred to in this EULA as the "SOFTWARE." All rights that are not specifically granted herein to you are reserved.

This EULA is valid and grants you rights ONLY if the SOFTWARE is genuine.

 BACK


IF YOU DO NOT AGREE TO THIS END-USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE. INSTEAD, PROMPTLY CONTACT HM ELECTRONICS, INC. ("HME") FOR INSTRUCTIONS ON RETURNS OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE OF THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

GRANT OF SOFTWARE LICENSE. This EULA grants you the following license:

- You may use the SOFTWARE only on the DEVICE.
- **RESTRICTED FUNCTIONALITY.** You are licensed to use the SOFTWARE to provide only the limited functionality (specific tasks or processes) for which the DEVICE has been designed and marketed by HME. This license specifically prohibits any other use of the SOFTWARE programs or functions, or inclusion of additional software programs or functions that do not directly support the limited functionality on the DEVICE.
- **SOFTWARE AS A COMPONENT OF THE DEVICE – TRANSFER.** This license may not be shared, transferred to or used concurrently on different computers. The SOFTWARE is licensed with the DEVICE as a single integrated product and may only be used with the DEVICE. If the SOFTWARE is not accompanied by a DEVICE, you may not use the SOFTWARE. You may permanently transfer all of your rights under this EULA only as part of a permanent sale or transfer of the DEVICE, provided you retain no copies of the SOFTWARE. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the SOFTWARE must agree to all the EULA terms.
- **PRODUCT SUPPORT.** For product support, please refer to HME support number provided in the documentation for the DEVICE. Should you have any questions concerning this EULA, or if you desire to contact HME for any reason, please contact us at: HM Electronics, Inc., 14110 Stowe Drive, Poway, California, 92064 U.S.A. Web: www.hme.com. Email: support@hme.com. Phone: 1-800-848-4468.
- **RESTRICTED USE.** The SOFTWARE is not designed or intended for use or resale in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, or other devices or systems in which a malfunction of the SOFTWARE would result in foreseeable risk of injury or death to the operator of the device or system, or to others.
- **NOT FAULT TOLERANT.** The SOFTWARE is not fault tolerant. HME has conducted sufficient testing to determine that the SOFTWARE is suitable for use.
- **NO RENTAL/COMMERCIAL HOSTING.** You may not rent, lease, lend, or provide commercial hosting services with the SOFTWARE to others.
- **SEPARATION OF COMPONENTS.** The SOFTWARE is licensed as a single product. Its component parts may not be separated for use on more than one DEVICE.
- **LIMITATIONS ON REVERSE ENGINEERING, DECOMPILATION, AND DISASSEMBLY.** You may not reverse engineer, decompile, or disassemble

DECLINE**AGREE**

Store #: 123 5:23:20 PM HME

0:58


Window

| | |
|---|--|
| 0:04 Daypart Avg 0:28 Window Goal 1:15 | 0:00 Daypart Avg 0:24 Order Goal 1:15 |
| Current Bottleneck Order | 0:58 Day Avg 1:56 OTD Goal 4:00 |
| 13 Best 13 Daypart Transactions | 0 Trans > 7:00 min (Daypart) Order |

START


NETWORKING

For the ZOOM timer to connect to the HME CLOUD and the Leaderboard ranking to display, it needs to utilize an internet connection in the store. This internet connection must have certain rules and ports opened for these connections to work.

If the store cannot allow these, the DTOS system will not fully function.



CU50 TO HME CLOUD PATHWAY

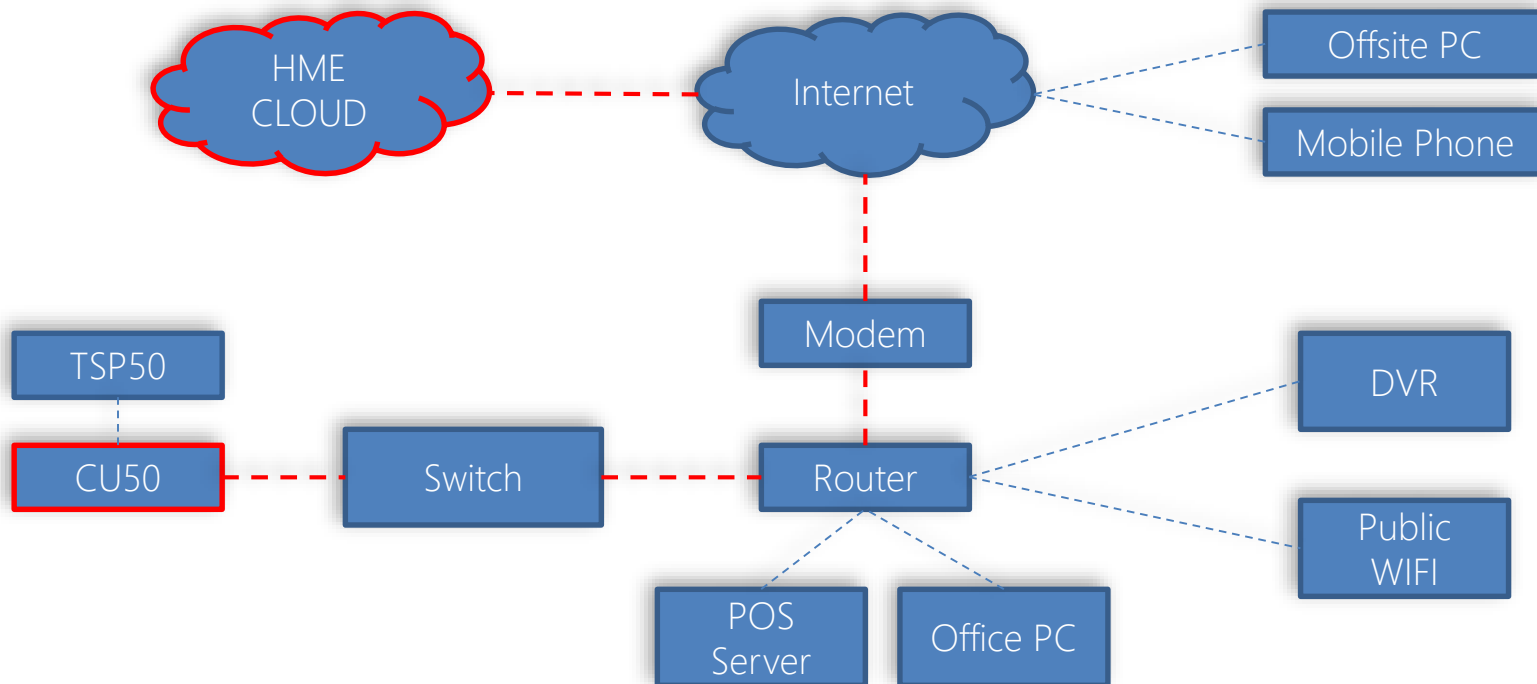

NETWORKING

For ZOOM and Leaderboard to be fully operational in the store, the CU50 must be connected to an open port on the store's router/switch and the following network firewall rules must be allowed:

1. Destination Domain: hmedtcloud.com
2. Network ports:
 - Outbound, 18001, TCP
 - Outbound, 19000, TCP
 - Outbound, 443 (HTTPS), TCP
 - Outbound, 80 (HTTP), TCP
 - Ping requests to hmedtcloud.com
 - Outbound, 20000-29999 (inclusive) (HTTP), TCP



Click the EDIT button to modify settings.

HELP

REFRESH

EDIT

HME

CLOUD

HME CLOUD Settings

| | |
|------------------------|----------------|
| Connection Status: | Connected |
| Account Email Address: | nwylie@hme.com |
| Account Status: | Registered |
| Use HME Cloud: | Yes |

| | |
|--------------------------|---------------|
| Test Cloud Connection: | RUN |
| Ping for hmedtcloud.com: | PASSED |
| Check port 19000: | PASSED |
| Check port 443: | PASSED |

EDIT

Store Information

| | |
|----------------|-------------------|
| Store #: | 123 |
| Store Brand: | Other |
| Store Address: | 14110 Stowe Drive |

BANDWIDTH

A broadband internet connection is required in order to use the HME CLOUD service. There is a minimum bandwidth requirement to ensure optimal operation:

1. Minimum Bandwidth Requirements
 - 250 Kbps download/upload
2. Recommended Bandwidth
 - 320 Kbps download/upload
3. HME recommends <http://www.speedtest.net/> using a server on the west coast of the US




The image shows a browser window displaying the Speedtest.net website. The browser's address bar shows the URL www.speedtest.net. The website's navigation bar includes the Speedtest logo and links for [ADVERTISE](#), [BECOME A HOST](#), [MY RESULTS](#), [SUPPORT](#), [SETTINGS](#), [LOGIN](#), and [CREATE AC](#). The main content area features a large, futuristic-looking interface with a glowing green "BEGIN TEST" button. Below the button is a world map with a green box highlighting the United States. In the bottom left corner, the IP address **70.167.162.194** is displayed, along with the ISP name **Cox** and a "Rate Your ISP" link with five stars. In the bottom right corner, a large green number **9,635,871,881** is shown next to a globe icon. The browser window also shows standard navigation icons (back, forward, refresh, home) and a search icon.

EMAIL

If the ZOOM system will be sending outbound email, either for scheduled reports or diagnostic purposes, the following network firewall rules must be allowed:


1. Destination Domain: api.mailgun.net
2. Network Port
 - Outbound, 443 (HTTPS), TCP
3. Destination Domain: smtp.mailgun.net
4. Network Port
 - Outbound 587 (SMTP), TCP

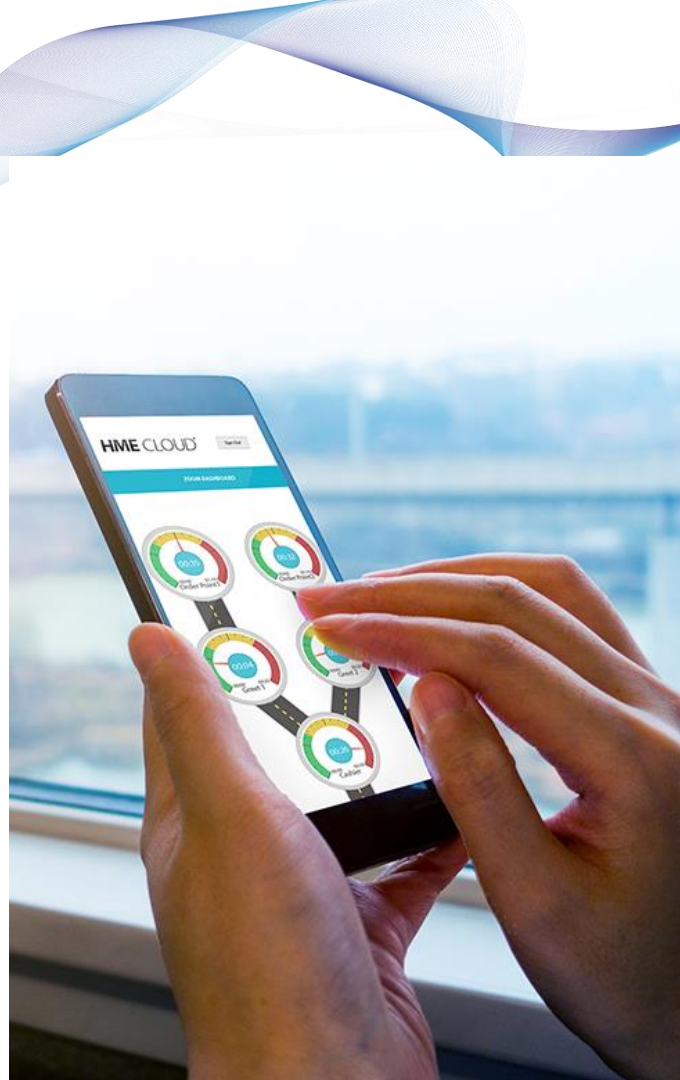

TIMER ACCURACY

What is accuracy in a timer?


- If a vehicle spends 3 minutes in a drive thru, the timer reports 3 minutes.
- If 1100 vehicles go through the drive thru lane, the timer reports times for 1100 vehicles
- There will **NEVER** be an exception to this.

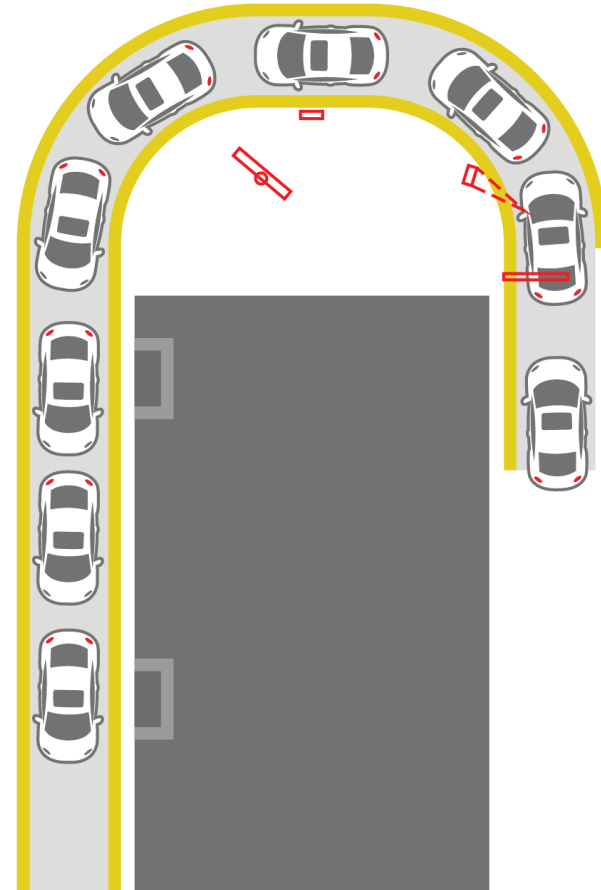

CONTROLLED CONDITIONS

A laboratory, classroom or other controlled environment would be able to perfectly simulate vehicle activity going through the drive thru lane. Every car would go through each detection point, in order. There would never be any false detections from stray metal (steel plated boots, metal trash carts, passing cars etc).

Unfortunately, an actual store is not a controlled environment.

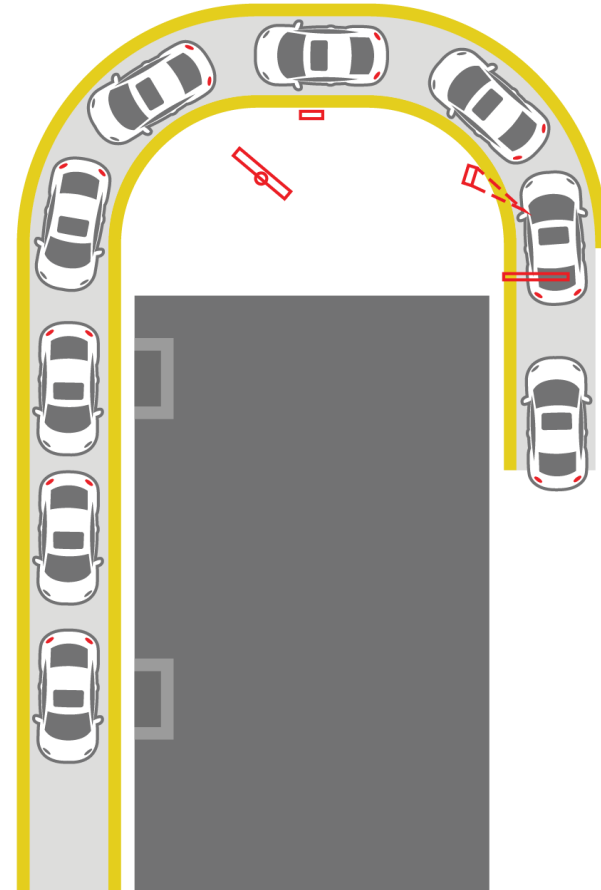



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

Menu

Cashier

Service



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

Menu

Cashier

Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

Welcome



Menu

Cashier

Service



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu

Cashier

Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu

Cashier

Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu

Cashier

Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

Menu

Cashier

Service





HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service

HME

 
HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service

HME

 
HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service



HME

 
HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service

 


HME


HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier

 

Service



HME

 
HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu

Cashier

Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu

Cashier

Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu

Cashier

Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service



HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Cashier



Service

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS



Menu



Service





HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS


QUESTIONS?

The DTOS quiz is next!

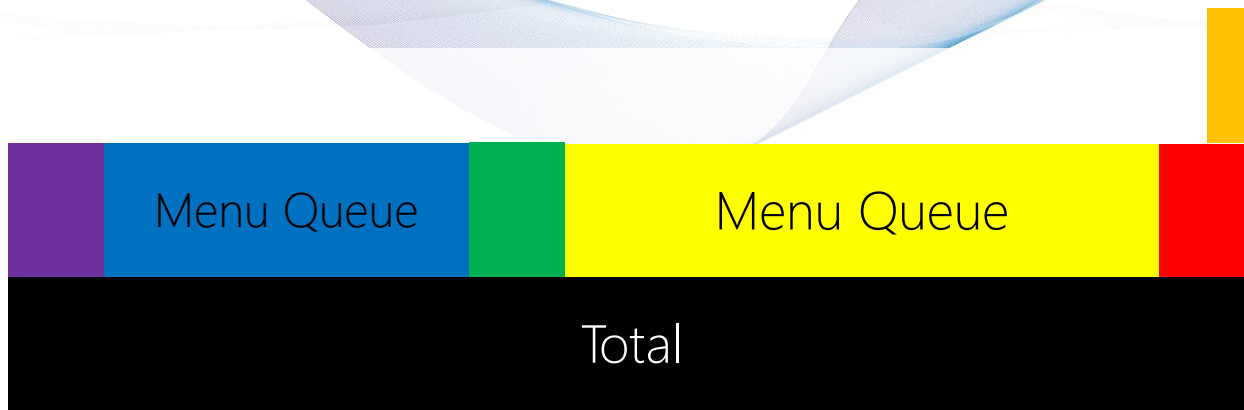


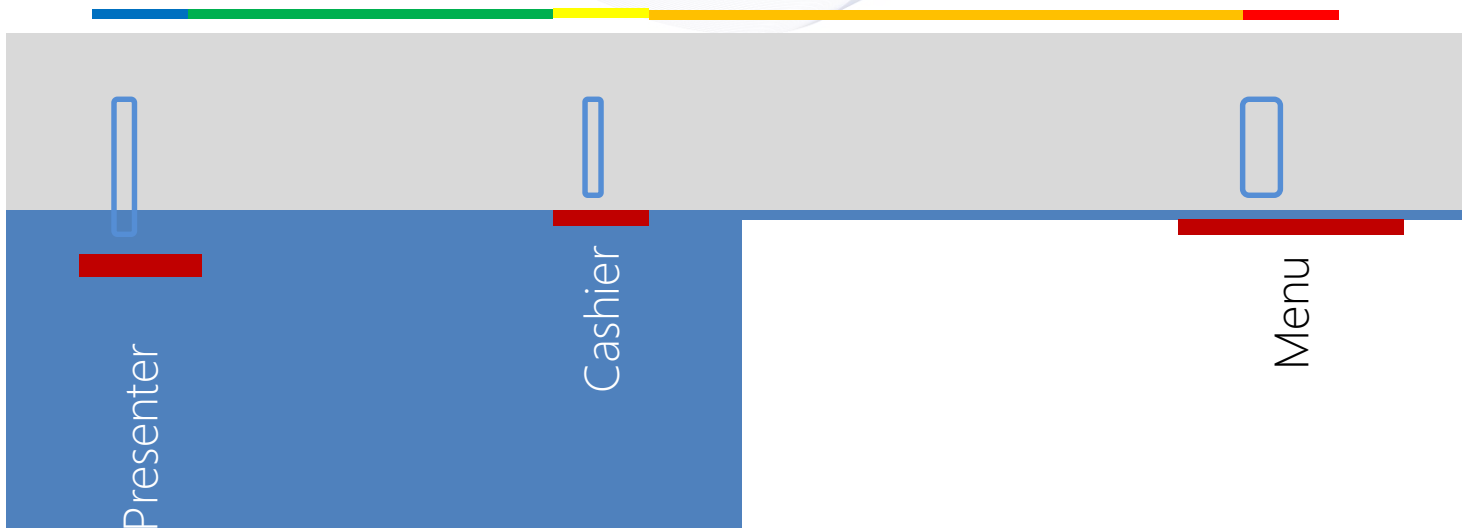

The timer is designed with a normal drive thru transaction in mind. For example, when the Menu loop activates and deactivates, the timer assumes that a car arrived at Menu and pulled forward to head to the Cashier window. There is never an exception to this.

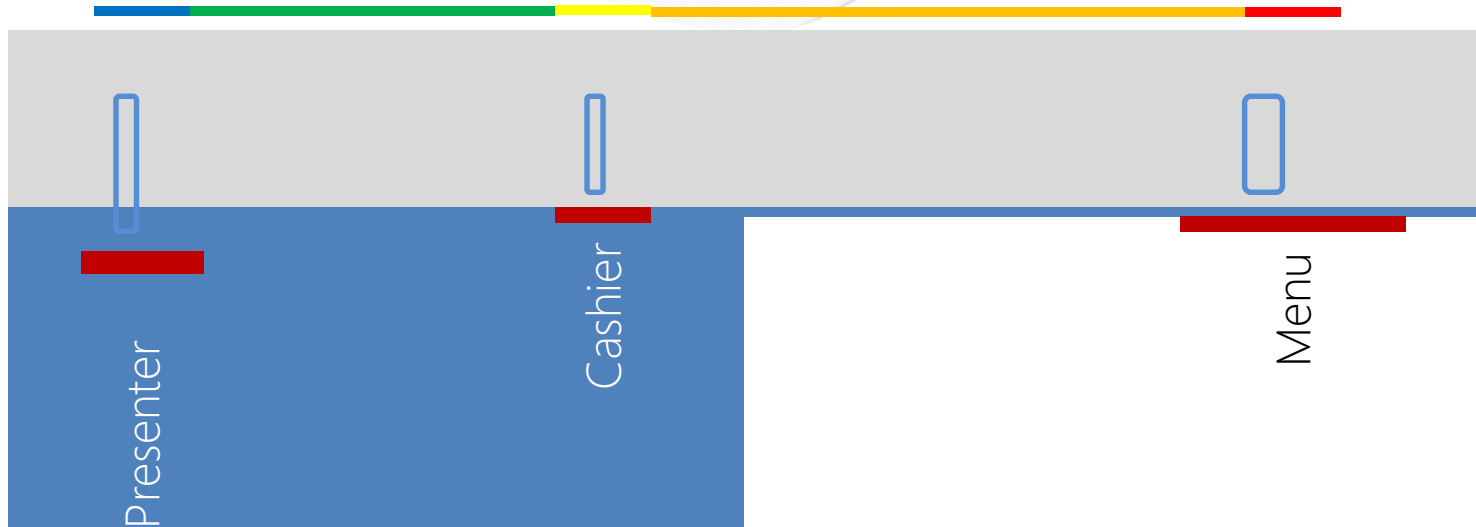


Just imagine the drive thru lane experience is separated into segments that cars enter and leave. In this example, you have **Menu**, **Menu Queue**, **Cashier**, **Cashier Queue** and **Presenter**. If these are considered segments and are similar to stop watches with a clear start and stop.

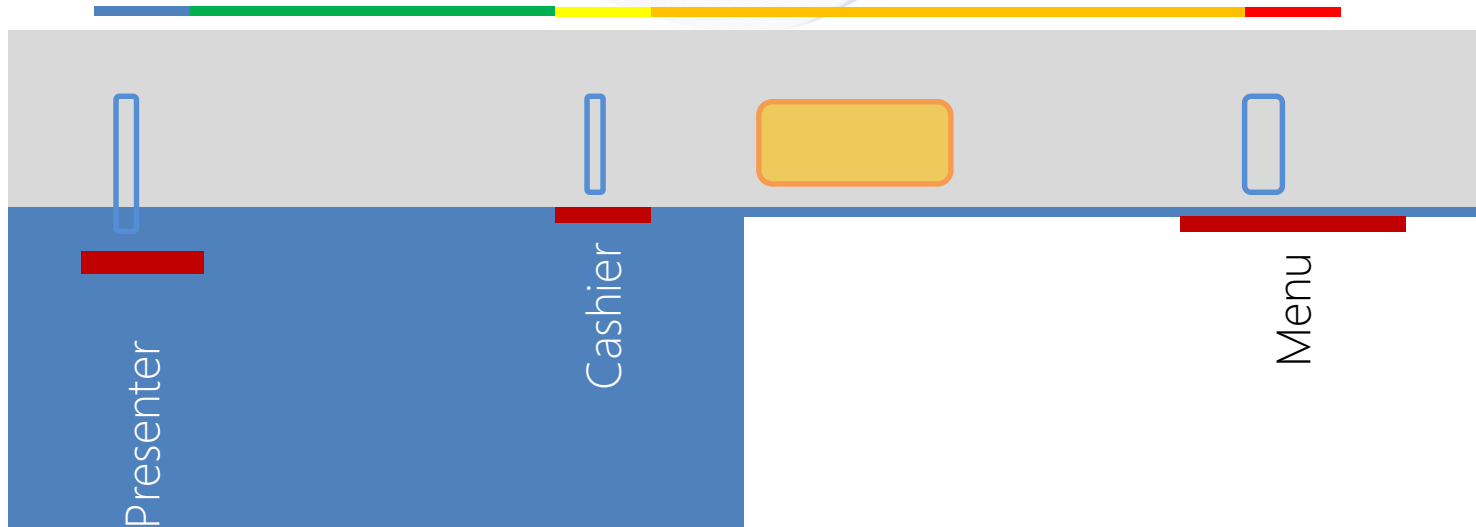

As the Menu sensor deactivates, the timer assumes the car is moving forward to the next part of the drive thru lane. In this case, the car moves into Menu Queue. The timer assumes the car is in the queue and will move it forward to Cashier once Cashier activates.


HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

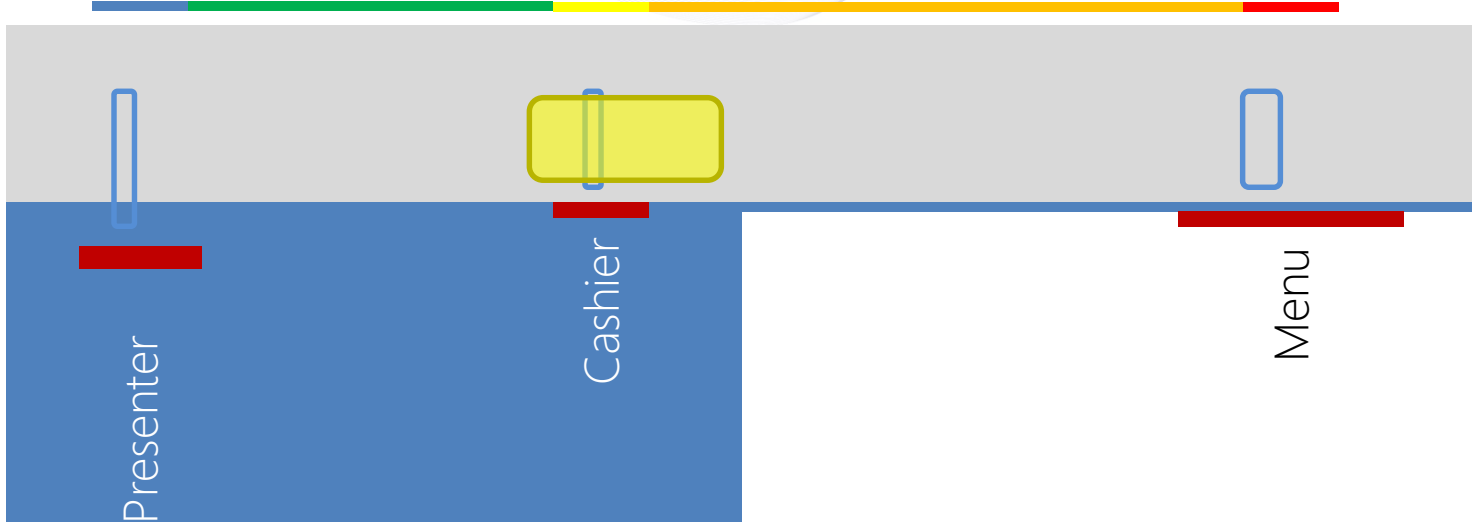


HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

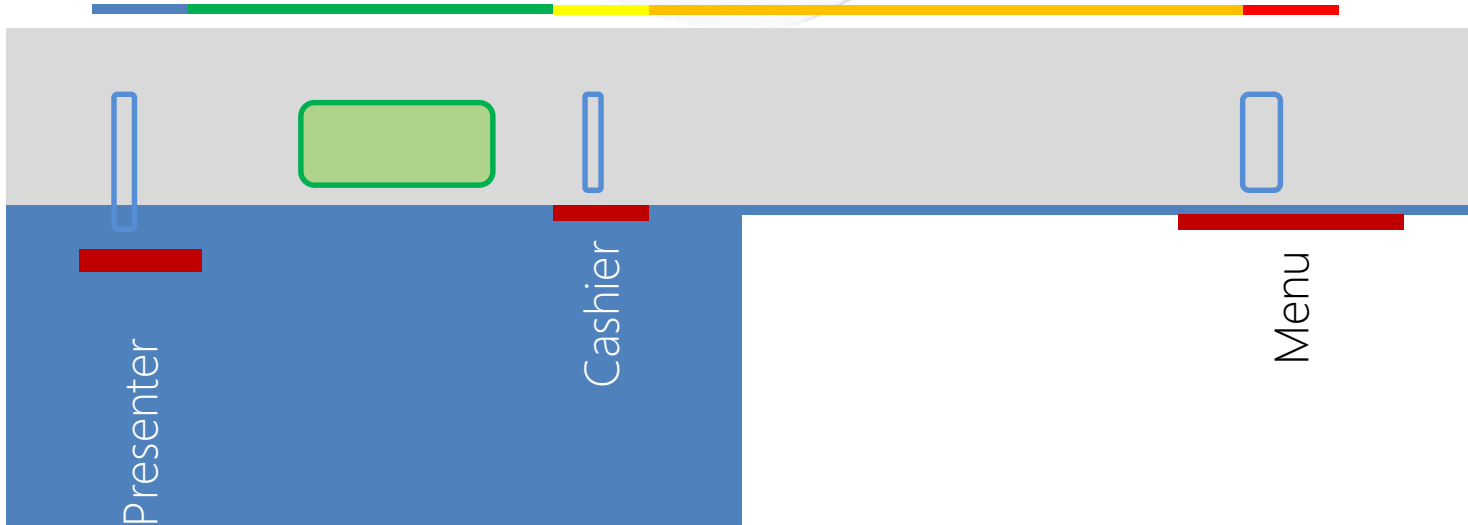


HME


HOSPITALITY & SPECIALTY
COMMUNICATIONS

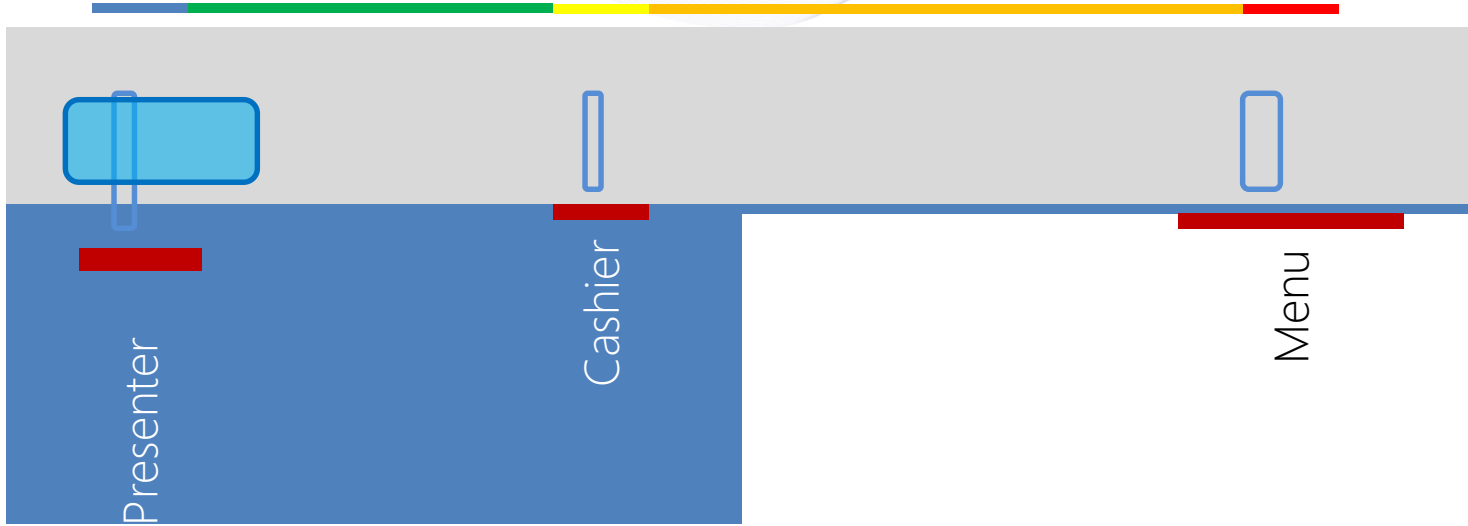

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

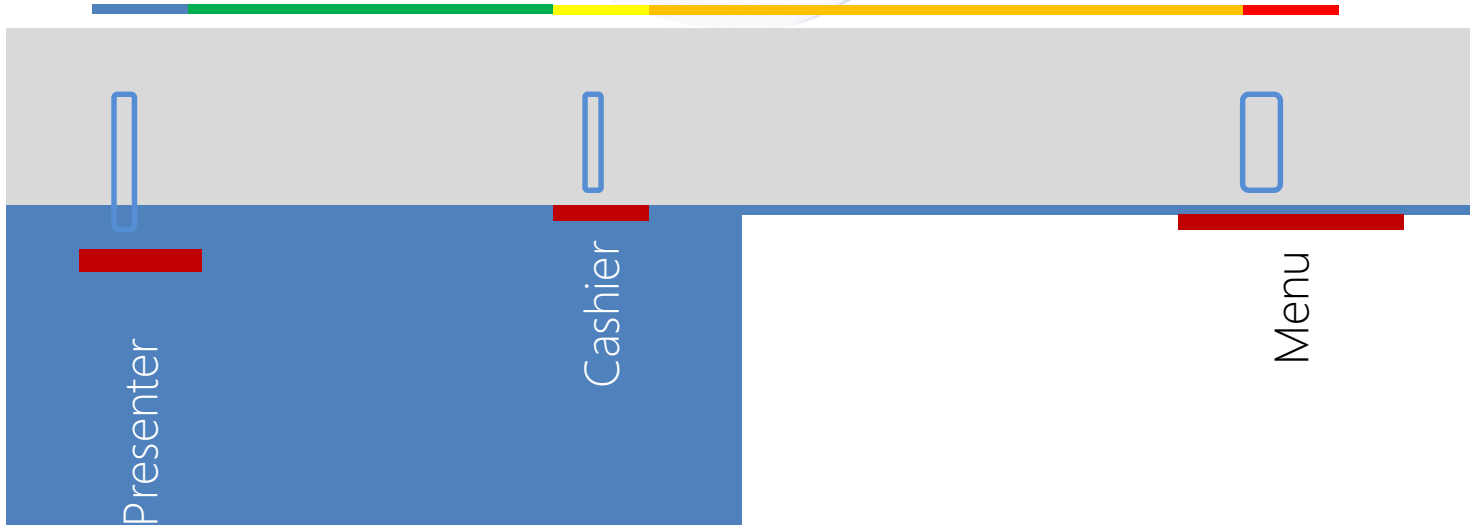


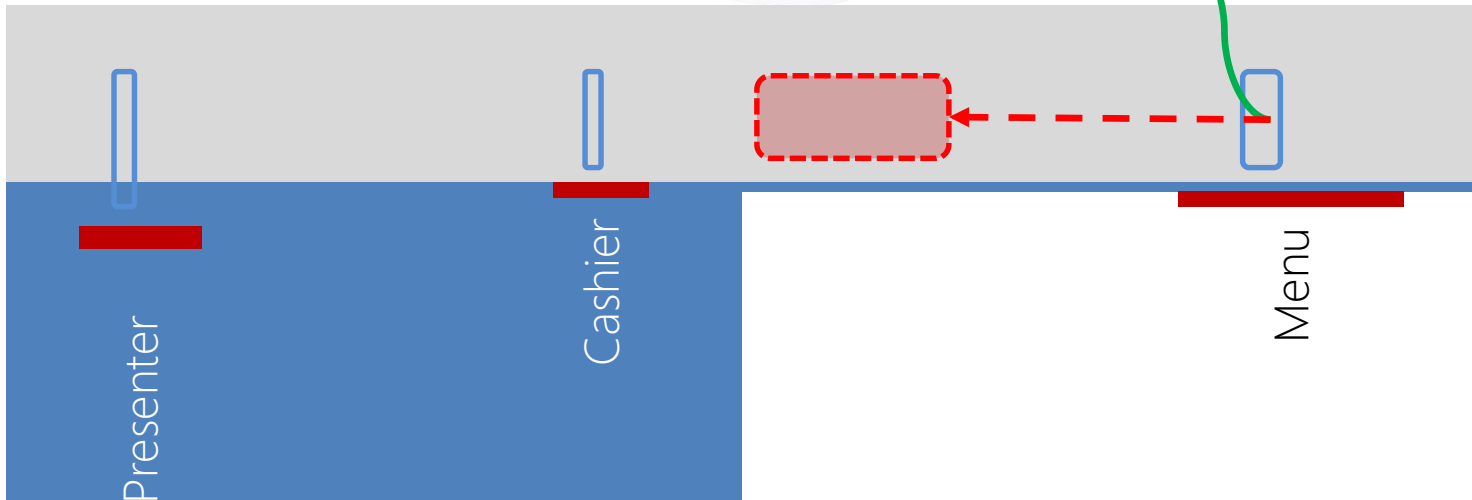

Testing


HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

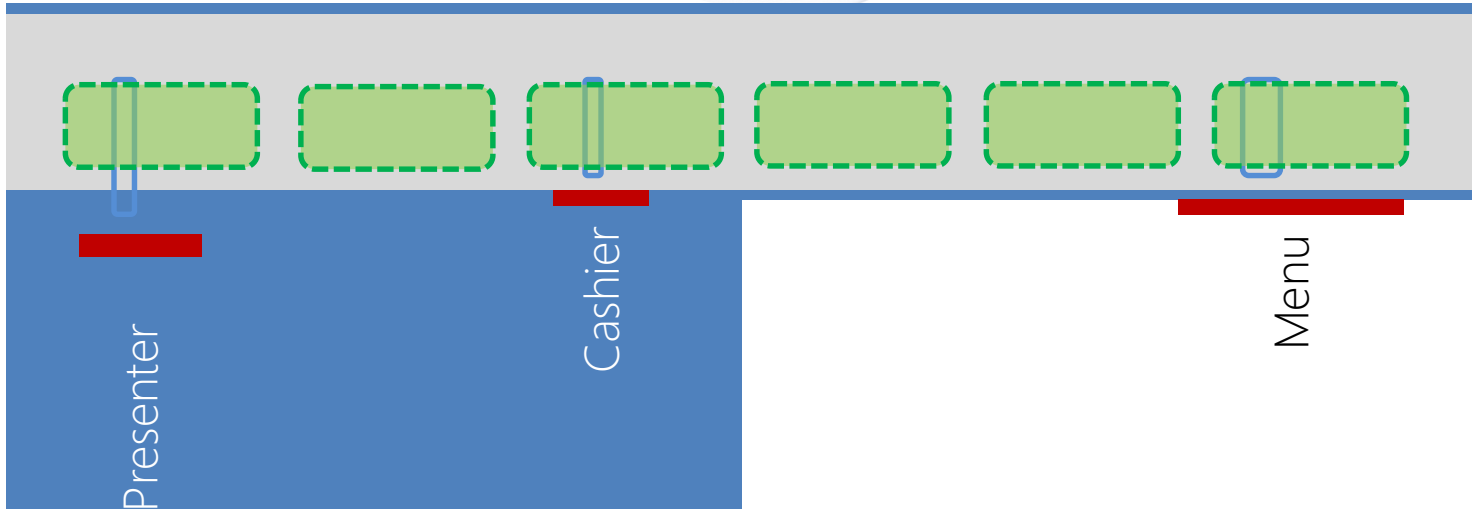

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

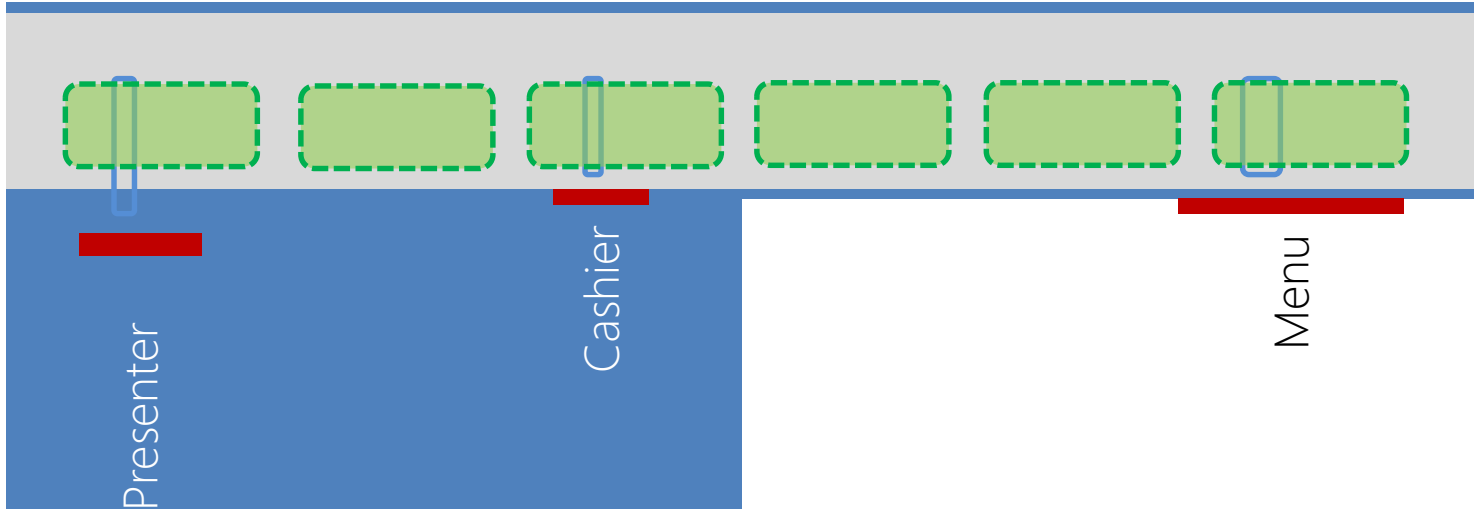

HME

HOSPITALITY & SPECIALTY
COMMUNICATIONS

